


# Instructions for Grounding of Pressure Sensor


DEC-2022

## CONNECTING GND FOR SENSOR


**Step 1:** Open the blue housing of the sensor

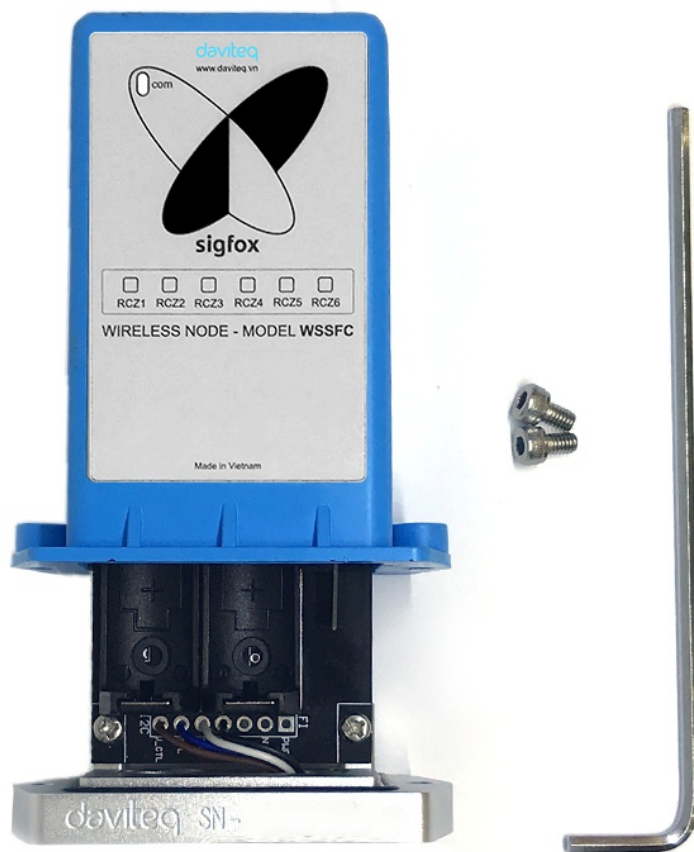


**Step 2:** Locate the GND point on the PCB (same GND point of Battery);

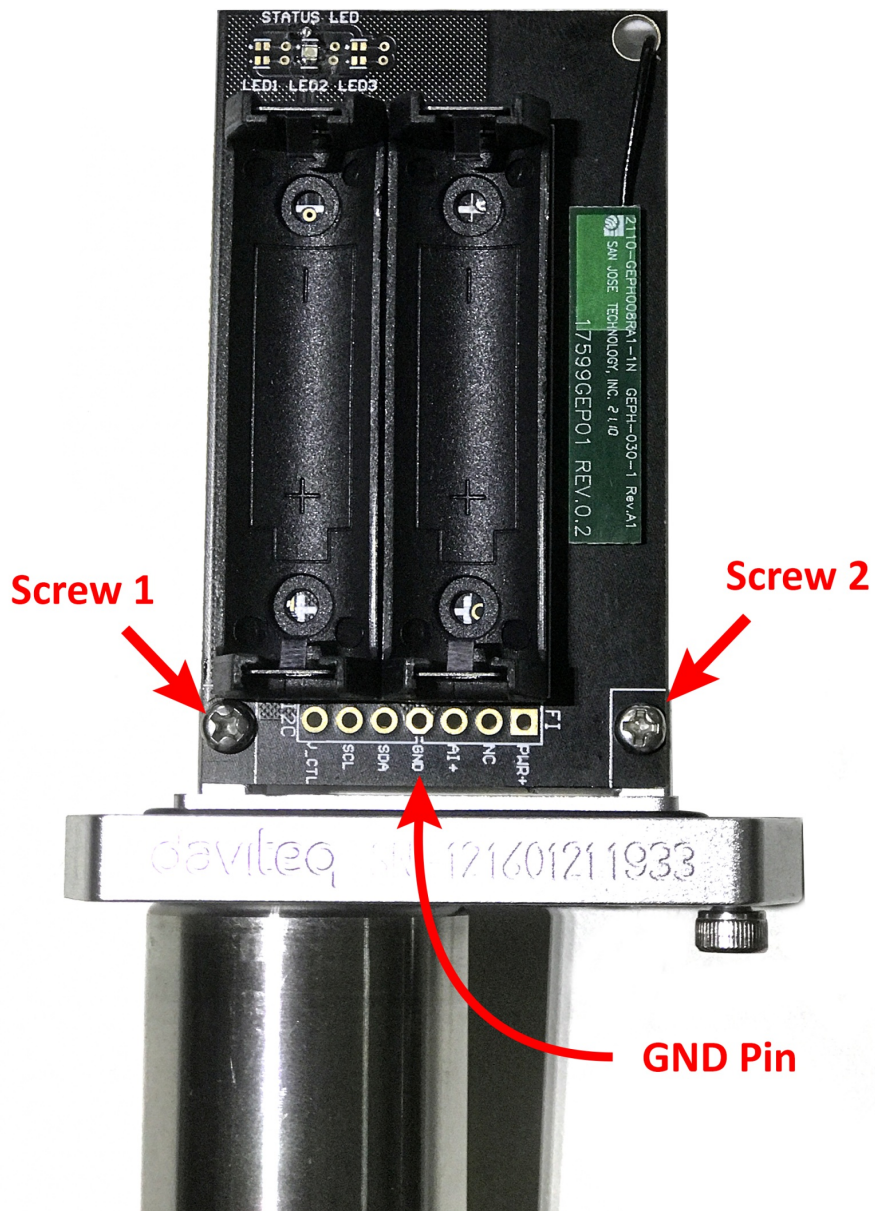

**Step 3:** Solder a wire to this GND point; the other end of the wire will be screwed to 1 of 2 screws on the aluminum base;

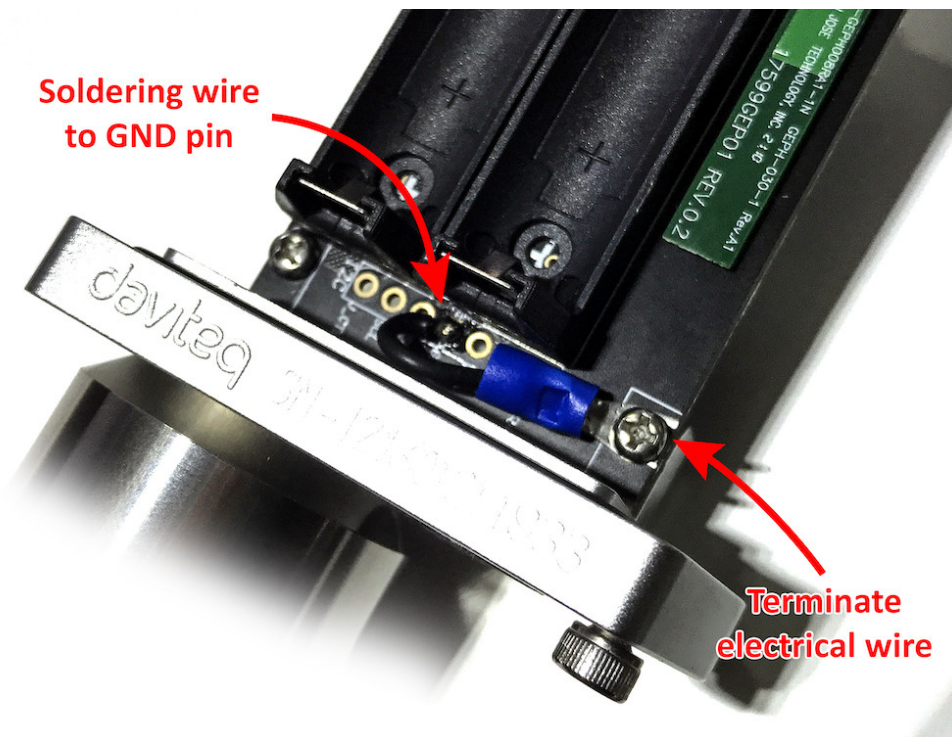

**Step 4:** Outside of the aluminum base there is another screw → make a wire connection from this screw to the body of pressure sensor (stainless steel cylindrical body) → Use a hose clamp or stainless steel pipe bracket to lock the connection between the wire and the housing.

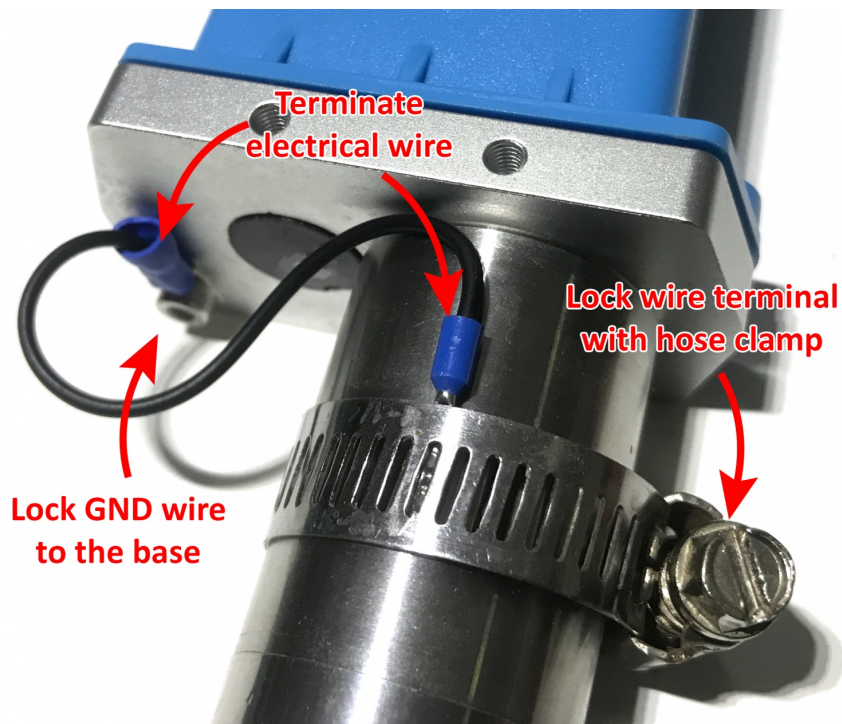

## Support contacts

Manufacturer

**daviteq**

**Daviteq Technologies Inc**

No.11 Street 2G, Nam Hung Vuong Res., An Lac Ward, Binh Tan Dist., Ho Chi Minh City, Vietnam.  
Tel: +84-28-6268.2523/4 (ext.122)

---

🕒 Revision #3

★ Created Wed, Dec 7, 2022 12:53 AM by [Lộc Vĩnh Nguyễn](#)

✎ Updated Mon, Jan 9, 2023 2:17 AM by [Lộc Vĩnh Nguyễn](#)