


Instructions for Grounding of Pressure Sensor


DEC-2022

CONNECTING GND FOR SENSOR

Step 1: Open the blue housing of the sensor

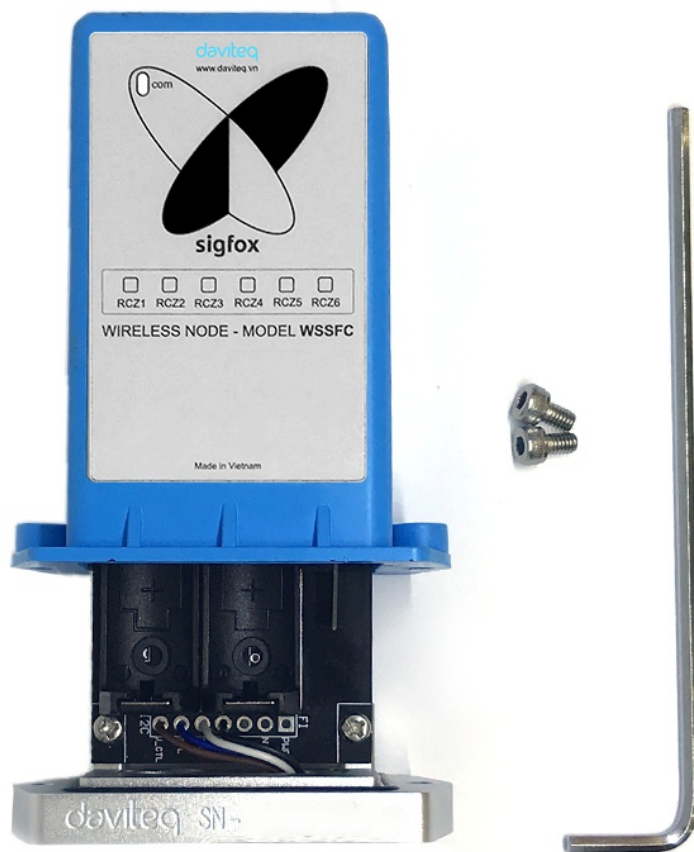

Step 2: Locate the GND point on the PCB (same GND point of Battery);

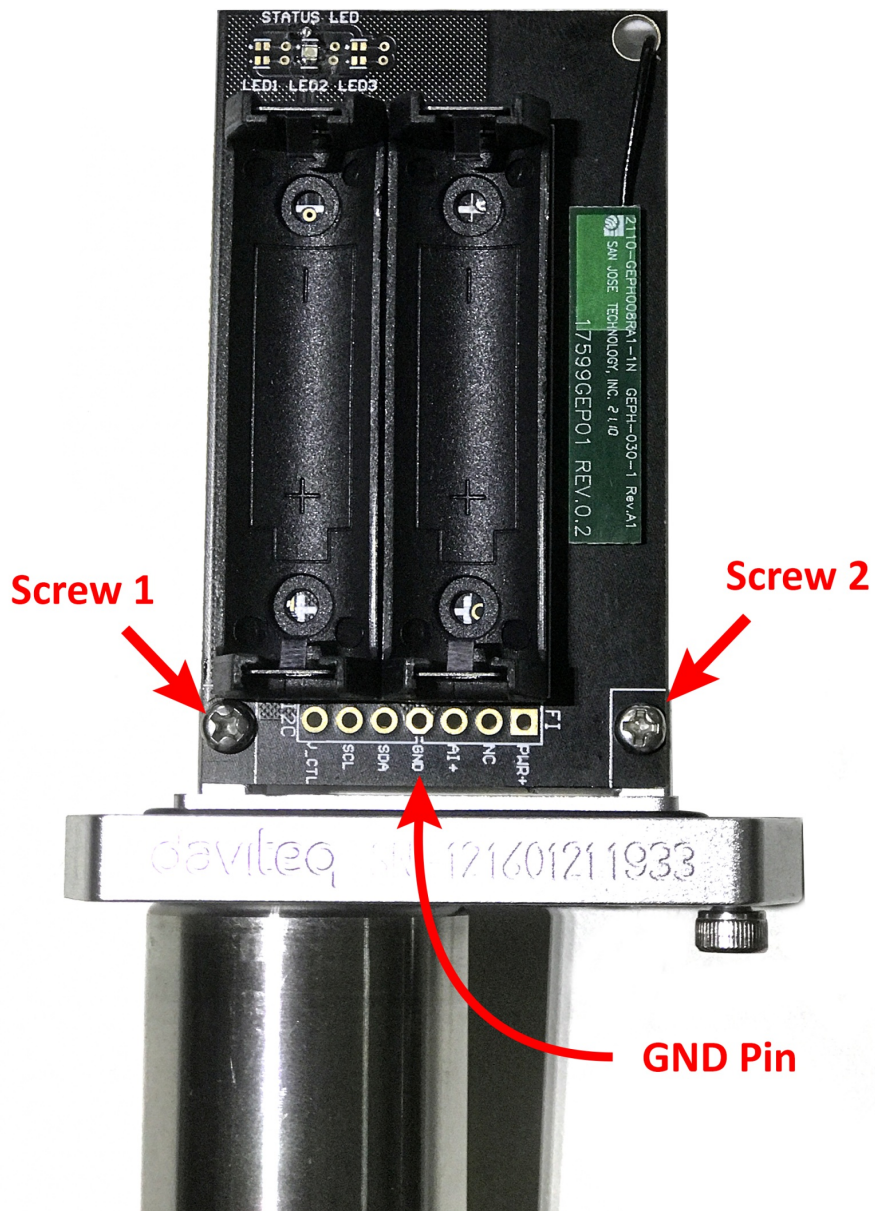

Step 3: Solder a wire to this GND point; the other end of the wire will be screwed to 1 of 2 screws on the aluminum base;

🕒 Revision #3

★ Created Wed, Dec 7, 2022 12:53 AM by [Lộc Vĩnh Nguyễn](#)

✎ Updated Mon, Jan 9, 2023 2:17 AM by [Lộc Vĩnh Nguyễn](#)