




HTML table for LED indication 2

| Uplink message | Pre-condition | Action | Led Status | Buzzer Status | Activities |
|-------------------|---------------|--|----------------|---------------|--------------|
| FORCE_DATA | Any state | Move Magnet Key to contact point of REED SWITCH. Led blink SKY BLUE and buzzer beep 1 time, move Magnet Key away. | Blink SKY BLUE | Beep 1 time | See FW specs |
| PARAMETERS_UPDATE | Any state | Move Magnet Key to contact point of REED SWITCH. Led blink SKY BLUE and buzzer beep 1 time. Then hold Magnet Key 5s, Led blink PURPLE and buzzer beep 2 times, move Magnet Key away. | Blink PURPLE | Beep 2 times | See FW specs |

-  Revision #2
-  Created Mon, Sep 11, 2023 8:10 PM by [Phan Van Luc](#)
-  Updated Mon, Sep 11, 2023 8:18 PM by [Phan Van Luc](#)