

# HTML table for LRW configuration

Field	Input field
Frequency name	Input correct frequency plan (Ex: Australia 915-928 MHz, FSB 2 (used by TTN))
DevEUI	As DevEUI on label of the device or read from device memory map
Activation mode	Over-the-Air Activation (OTAA) with local Join Server
AppEUI	Input AppEUI. This value read on device memory map or on the label of the device. The default value is 0102030405060708
AppKey	Input AppKey.This value read on device memory map or on the label of the device. The default value is 0102030405060708090A0B0C0D0E0F10
Lorawan version	Must be choose version 1.0.3

---

🕒 Revision #4

★ Created Tue, Sep 5, 2023 8:54 PM by [Phan Van Luc](#)

✎ Updated Tue, Sep 5, 2023 10:04 PM by [Phan Van Luc](#)