

# Payload WSLRW-AG | Firmware 2

## 1. Payload document is applied for the following products

Item code	HW Version	Firmware Version	Remarks
WSLRW-AG	1	2	

## 2. Changes information in this version v.s previous version

Item	Changes	Changed by	Changed Date	Approved by	Approved Date
2	Improve accuracy and resolution on FW 2	P.N.Diep	07-09-2022	N.V.Loc	07-09-2022
1	Initial version FW 1	P.N.Diep	01-06-2022	N.V.Loc	02-06-2022

**i** The approved date is also the release date of this document.

## 3. Payload for Uplink messages

### START\_UP message

When?	Purpose	Wait for Downlink?	LED color
This message will be sent once after 60 seconds from power-up the device	To understand when the device was powered up	YES	Blink WHITE

Payload	EVENT_ID	HW_VERSION	FW_VERSION	CURRENT_CONFIGURATIO
bits	4	4	8	64
value	0b0000 = 0	yes	yes	yes

### PARAMETER\_UPDATE message

When?	Purpose	Wait for Downlink?	LED color
When the reed switch is activated by the magnet key. <b>How?</b> Move Magnet Key to the contact point of REED SWITCH. Led blink SKY BLUE, hold Magnet Key 5s. Led blink PURPLE, move Magnet Key away.	To send the new configuration to the device via downlink	YES	Blink PURPLE

Payload	EVENT_ID	HW_VERSION	FW_VERSION	CURRENT_CONFIGURATIO
bits	4	4	8	64
value	0b0001 = 1	yes	yes	yes

### FORCE\_DATA message






When?	Purpose	Wait for Downlink?	LED color
When the reed switch is activated by the magnet key. <b>How?</b> Move Magnet Key to the contact point of REED SWITCH. Led blink SKY BLUE, move Magnet Key away.	To get the instant measured value from the device for calibration and validation.	YES	Blink SKY BLUE

Payload	EVENT_ID	SENSOR_ERROR	reserved	BATTERY_LEVEL	reserved	X_TILT_VALUE	Y_TILT_VALUE	Z_TILT_VALUE
bits	4	1	5	2	4	16	16	16

value	0b0010 = 2	yes	zeros	yes	zeros	yes	yes	yes
-------	------------	-----	-------	-----	-------	-----	-----	-----

## CYCLIC\_DATA message

When?	Purpose	Wait for Downlink?	LED color
This message will be sent in the pre-defined cycle.	To get the measured value from the device in the pre-defined cycle.	YES	Blink SKY BLUE

Payload	EVENT_ID	SENSOR_ERROR	reserved	BATTERY_LEVEL	reserved	X_TILT_VALUE	Y_TILT_VALUE	Z_TILT_VALUE
								
bits	4	1	5	2	4	16	16	16
value	0b0011 = 3	yes	zeros	yes	zeros	yes	yes	yes

## 4. Payload Fields of Uplink

Below is an explanation of the payload fields in the uplink messages.

Data name	Description	Encoding or Possible values	Length (in bits)
<b>EVENT_ID</b>	Unique ID identifying the device event	4-bit unsigned integer 0 = START_UP 1 = PARAMETERS_UPDATE 2 = FORCE_DATA 3 = CYCLIC_DATA	<b>4</b>
<b>HW_VERSION</b>	HW_VERSION = HW_VERSION value in EEPROM set in production if the Value is unknown, the default value will be 0	4-bit unsigned integer 1..15	<b>4</b>
<b>FW_VERSION</b>	Indicate the FW version. Refer to the FW release note	8-bit unsigned integer 1..255	<b>8</b>
<b>CURRENT_CONFIGURATION</b>	The current configuration code of the device	64-bit encoded field Refer to the Downlink section	<b>64</b>
<b>SENSOR_ERROR</b>	Indicate the sensor error or not	0b0 = no sensor's error 0b1 = sensor's error	<b>1</b>
<b>BATTERY_LEVEL</b>	Battery level	2-bit unsigned integer 0 to 3 0: 10% 1: 30% 2: 60% 3: 99%	<b>2</b>
<b>X_TILT_VALUE_X10</b>	X Tilt value	16-bit signed integer X_TILT_VALUE = X_TILT_VALUE_X10 / 10 Range: -90.0 to 90.0	<b>16</b>

<b>Y_TILT_VALUE_X10</b>	Y Tilt value	16-bit signed integer Y_TILT_VALUE = Y_TILT_VALUE_X10 / 10 Range: -90.0 to 90.0	<b>16</b>
<b>Z_TILT_VALUE_X10</b>	Z Tilt value	16-bit signed integer Z_TILT_VALUE = Z_TILT_VALUE_X10 / 10 Range: -90.0 to 90.0	<b>16</b>

## 5. Payload for Downlink messages

Users can use a downlink message to change the configuration of the device. There are 02 types of downlink messages:

- **Downlink type = 0:** Write the configuration for the specific type of LoRaWAN sensor. The format is fixed for each type of sensor.
- **Downlink type = 5:** Write a value to any address of the configuration parameter of the LoRaWAN sensor. This method is generic and can be applied to any type of LoRaWAN sensor, the user just needs to know the memory map of the sensor.

### 5.1 Downlink type = 0

<b>DOWNLINK_TYPE = 0</b>	<i>(led blink GREEN)</i>							
<b>Payload</b>	<b>reserved</b>	<b>LED_BUZZER_ENABLE</b>	<b>reserved</b>	<b>MEASURE_PERIOD</b>	<b>reserved</b>	<b>CYCLIC_DATA_PERIOD</b>	<b>DEVICE_RESET</b>	<b>DOWNLINK_TYPE</b>
<b>bits</b>	<b>44</b>	<b>1</b>	<b>3</b>	<b>4</b>	<b>1</b>	<b>3</b>	<b>4</b>	<b>4</b>
<b>Value</b>	<b>zeros</b>	<b>yes</b>	<b>zeros</b>	<b>yes</b>	<b>zeros</b>	<b>yes</b>	<b>yes</b>	<b>0b0000 = 0</b>

*Below is the table to explain in detail the meaning of each configuration parameter and its default value.*


Parameters	Description	Possible values	Default values	Length (in bits)
<b>LED_BUZZER_ENABLE</b>	Flag to enable/disable LED and Buzzer interactions for action not triggered by the button.	0b0 = false, LEDs are OFF 0b1 = true, LEDs are ON	0b1 = true	1
<b>MEASURE_PERIOD</b>	Period for sensing module to wake up and take measurement	0b0000 = every 1s 0b0001 = every 2s 0b0010 = every 5s 0b0011 = every 10s 0b0100 = every 20s 0b0101 = every 30s 0b0110 = every 1min 0b0111 = every 2min 0b1000 = every 5min 0b1001 = every 10min 0b1010 = every 20min 0b1011 = every 30min 0b1100 = every 1h 0b1101 = every 2h 0b1110 = every 3h 0b1111 = every 6h	0b1001 = every 10min	4

<b>CYCLIC_DATA_PERIOD</b>	Period to send CYCLIC_DATA	<i>0b000 = every 10min</i> <i>0b001 = every 30min</i> <i>0b010 = every 1h</i> <i>0b011 = every 2h</i> <i>0b100 = every 3h</i> <i>0b101 = every 6h</i> <i>0b110 = every 12h</i> <i>0b111 = every 24h</i>	0b000 = every 10min	3
<b>DEVICE_RESET</b>	Once this parameter is set, the device shall restart after receiving the Downlink. After restarting, the value turns to 0b0000 automatically.	<i>0b1010 = 0xA = Force device reset</i> <i>others = do nothing</i>	others = do nothing	4
<b>DOWNLINK_TYPE</b>	Downlink type	4-bit unsigned integer	0b0000	4

#### EXAMPLE FOR DOWNLINK TYPE = 0



If you plan to change the **MEASURE\_PERIOD = 30 minutes** and **CYCLIC\_DATA\_PERIOD = 30 minutes** then please enter your desired values, guided by the table below:

Parameter	Desired setting value	Setting Value (in binary)	Length (in bits)
<b>Reserved</b>	0	00000000000000000000000000000000 	44
<b>LED_BUZZER_ENABLE</b>	0b1 = enable LED and Buzzer	1	1
<b>Reserved</b>	0	000	3
<b>MEASURE_PERIOD</b>	0b1011 = every 30min	1011	4
<b>Reserved</b>	0	0	1
<b>CYCLIC_DATA_PERIOD</b>	0b001 = every 30min	001	3
<b>DEVICE_RESET</b>	0b0000 = do nothing	0000	4
<b>DOWNLINK_TYPE</b>	0b0000	0000	4

Then you will get the final configuration code as below:



0000 0000 0000 0000 0000 0000 0000 0000 0000 0000 0000 1000 1011 0001 0000 0000 =  
**0000000000008B100**

## 5.2 Downlink type = 5

With this downlink, the user can write the configuration to any address on the device's memory map. Please refer to the device's memory map to understand what parameters can be written.



The length of the configuration parameter can be 1, 2 bytes, or 4 bytes, but the total length of the Downlink payload must equal 64 bits (8 bytes). Please see below the downlink format for both types.

**Downlink type 5 for the parameter of 2 bytes length:**

Payload	PRM_ADDRESS	PRM_LENGTH	PRM_VALUE	reserved	DOWNLINK_TYPE
bits	8	8	16	28	4
Value	yes	0x02 = 2	yes	zeros	0b0101 = 5

**Downlink type 5 for the parameter of 4 bytes length:**

Payload	PRM_ADDRESS	PRM_LENGTH	PRM_VALUE	reserved	DOWNLINK_TYPE
bits	8	8	32	12	4
Value	yes	0x04 = 4	yes	zeros	0b0101 = 5

Where:

- PRM\_ADDRESS: address of the configuration parameter in the memory map of the device;
- PRM\_LENGTH: is the length of that parameter, in bytes;
- PRM\_VALUE: is the value the user wants to write to that parameter;
- reserved: a series of bits of zero to fulfill the downlink so that it has the total length = 64 bits (8 bytes)

#### EXAMPLE FOR DOWNLINK TYPE = 5

- ✓ Here is the list of parameters of WSLRW-AG that can be configured via Downlink type = 5 and the examples of the downlink payload on the right-most side column. It is the example value, not the default value of the device. Please check the device's memory map for more detail about the parameters.

**⚠ Note: the total length of the downlink must be equal to 8 bytes**

PARAMETER	DATA TYPE OF PARAMETER	PRM_ADDRESS	PRM_LENGTH	PRM_VALUE	DOWNLINK_TYPE	PAYLOAD OF DOWNLINK (IN HEXA)
(bytes)		1	1	4	2	8
ADAPTIVE DATA RATE	Uint16	0x40	0x02 = 2	0x00000001 = 1	0x0005	4002000000010005

## 5.3 Free online data conversion tools

- To convert from Float to Hex and vice versa, users may use this free online tool: <https://gregstoll.com/~gregstoll/floattohex/>
- To convert a decimal number to Hex, the user may use this free online tool: <https://www.binaryhexconverter.com/decimal-to-hex-converter>

## 6. Reed switches

The LoRaWAN sensor typically comes with at least one reed switch for user manipulation during commissioning or maintenance.

Some other versions come with 02 reed switches.

The WSLRW-AG comes with one reed switch; please find below the functions of this switch.

EVENT	PRE-CONDITION	ACTION	LED STATUS	ACTIVITIES	POST-CONDITION
FORCE_DATA	Any state	Move Magnet Key to the contact point of REED SWITCH. Led blink SKY BLUE, move Magnet Key away.	Blink SKY BLUE	the device will send the uplink message FORCE_DATA	Back to the previous state
PARAMETERS_UPDAT	Any state	Move Magnet Key to the contact point of REED SWITCH. Led blink SKY BLUE, hold Magnet Key 5s. Led blink PURPLE, move Magnet Key away.	Blink PURPLE	the device will send the uplink message PARAMETER_UPDATE	Back to the previous state

---

🕒 Revision #6

★ Created Tue, Sep 20, 2022 4:36 AM by [Lộc Vĩnh Nguyễn](#)

✎ Updated Tue, Sep 20, 2022 5:54 AM by [Lộc Vĩnh Nguyễn](#)