

Common notes in installation of Sigfox-Ready Sensors

The common instructions for all kinds of Daviteq Sigfox-Ready Sensor. Please see below.

1. HOW DO YOU GET A STRONG RF SIGNAL?

To maximize the transmission distance, the ideal condition is Line-of-sight (LOS) between the Sigfox-Ready sensor and the Sigfox Base station. In real life, there may be no LOS condition. However, the Sigfox-Ready sensor still communicates with the Base station, but the distance will be reduced significantly.

DO NOT install the wireless sensor or its antenna inside a completed **metallic** box or housing because the RF signal can not pass through the metallic wall. The housing is made from Non-metallic materials like plastic, glass, wood, leather, concrete, and cement...is acceptable.

2. INSTALL BATTERIES FOR SIGFOX-READY SENSOR

2.1 INSTALL BATTERIES FOR SIGFOX-READY SENSOR WITH BLUE BOX HOUSING

RECOMMENDED BATTERIES FOR SIGFOX SENSOR

E91 AA Alkaline battery



L91 AA Lithium battery



-18 .. + 60 oC working temperature

10-year shelf life

3000 mAh Capacity

Price: 1X

-40 .. + 60 oC working temperature

20-year shelf life

3500 mAh Capacity

Price: 3.5X

WSSFC-ULC-H7.PNG

Steps for battery installation:

Step 1: Using L hex key to unscrew M4 screws at the side of the housing and carefully pull out the top plastic housing in the vertical direction



Step 2: Insert 02 x AA 1.5VDC battery, please take note the poles of the battery

ATTENTION:



REVERSED POLARITY OF BATTERIES IN 10 SECONDS CAN DAMAGE THE SENSOR CIRCUIT!!!



Step 3: Insert the top plastic housing and locking by L hex key

ATTENTION:



When reinstalling the cover, pay attention to put the PCB edge into the middle slot of the box inside as shown below)



2.2 INSTALL BATTERIES FOR SIGFOX-READY SENSOR WITH WHITE BOX HOUSING, 6 X AA BATTERIES (SENSOR -LPC)

RECOMMENDED BATTERIES

E91 AA Alkaline battery



-18 .. + 60 oC working temperature
10-year shelf life
3000 mAh Capacity
Price: 1X

L91 AA Lithium battery



-40 .. + 60 oC working temperature
20-year shelf life
3500 mAh Capacity
Price: 3.5X

WSSFC-LPC-H5.PNG

Steps for battery installation:

Step 1: Use flat head screws to push into 2 reed joints



Step 2: Open the housing, then insert 06 x AA 1.5VDC battery, please take note of the poles of the battery

⚠ ATTENTION: REVERSED POLARITY OF BATTERIES IN 10 SECONDS CAN DAMAGE THE SENSOR CIRCUIT!!!



Step 3: Insert the top plastic housing (Please note the 2 reed joints)



2.3 INSTALL BATTERIES FOR SIGFOX-READY SENSOR WITH BLACK BOX HOUSING, 2 X AA BATTERIES (SENSOR -ULA)

RECOMMENDED BATTERIES FOR SIGFOX SENSOR

E91 AA Alkaline battery



-18 .. + 60 oC working temperature

10-year shelf life

3000 mAh Capacity

Price: 1X

L91 AA Lithium battery



-40 .. + 60 oC working temperature

20-year shelf life

3500 mAh Capacity

Price: 3.5X

WSSFC-ULC-H7.PNG

Steps for battery installation:

Step 1: Use a screwdriver to open the 4 screws on the underside of the housing



Step 2: Open the housing, then insert 02 x AA 1.5VDC battery

⚠ ATTENTION: REVERSED POLARITY OF BATTERIES IN 10 SECONDS CAN DAMAGE THE SENSOR CIRCUIT!!!



Step 3: Insert the plastic housing and locking the 4 screws by screwdriver



2.4 INSTALL BATTERIES FOR SIGFOX-READY SENSOR WITH EXD-

APPROVED HOUSING WSSFCEX-...

Depends on the design of each device. Each device may need 1 pc of Type C or Type D battery. Please check the specification of that device. We recommend the below batteries to be used with our devices.

<p><u>LS 26500 Lithium battery</u></p>  <p>LS 26500 3.6V Li-SOCl₂</p> <p>-60°C..+85°C working temperature Low self-discharge rate 7.7 Ah Capacity</p>	<p><u>LS 33600 Lithium battery</u></p>  <p>LS 33600 3.6V Li-SOCl₂</p> <p>-60°C..+85°C working temperature Low self-discharge rate 17.0 Ah Capacity</p>
---	--

Steps for battery installation:

DANGER:

DO NOT REPLACE BATTERY AT HAZARDOUS LOCATION!



DO NOT OPEN THE COVER AT HAZARDOUS LOCATION!

ONLY OPEN COVER AND REPLACE BATTERY IN SAFE AREA!

Step 1: Turn the front cover of the sensor counter-clockwise;



Step 2: Carefully take out the front cover of the sensor

Step 3: Insert the battery, please take note the polarity of battery

ATTENTION:



REVERSED POLARITY OF BATTERIES IN 10 SECONDS CAN DAMAGE THE SENSOR CIRCUIT!!!



Step 4: Turn the front cover of the sensor clockwise to close fully.



NOTES:



Using 2mm hex key to lock the cover to prevent the unattended opening.




3. MOUNTING FOR SIGFOX-READY SENSOR

3.1 MOUNTING FOR SIGFOX-READY SENSOR WITH BLUE BOX HOUSING

The following are the steps for the Sigfox-ready sensor with a Blue box housing design.

Step 1: Install the bracket on the sensor

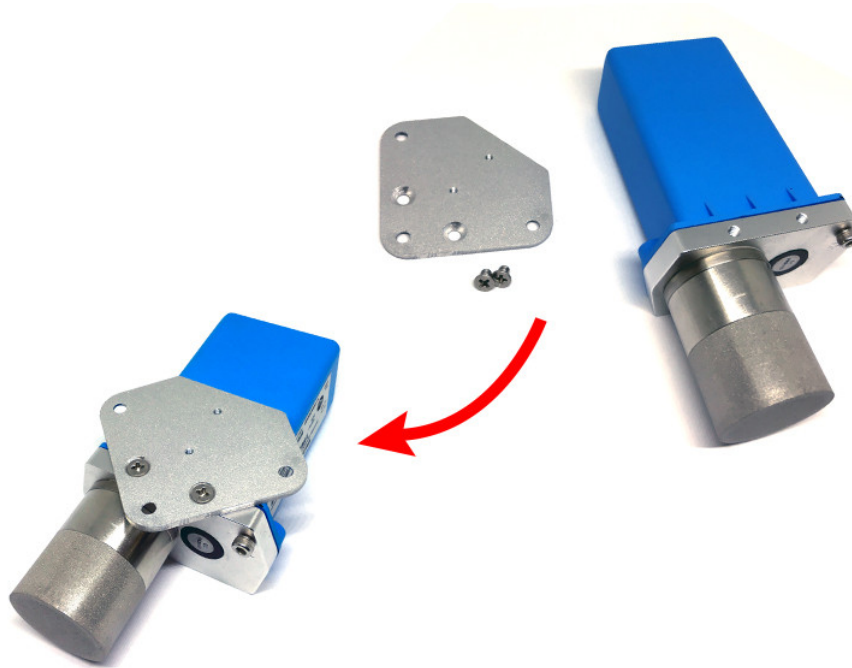

Step 2: Determine the mounting position and secure the sensor with the included screws







Step 3:Grounding the sensor



3.2 MOUNTING FOR SIGFOX-READY SENSOR WITH WHITE BOX HOUSING

3.3 MOUNTING FOR SIGFOX-READY SENSOR WITH EXD-APPROVED HOUSING

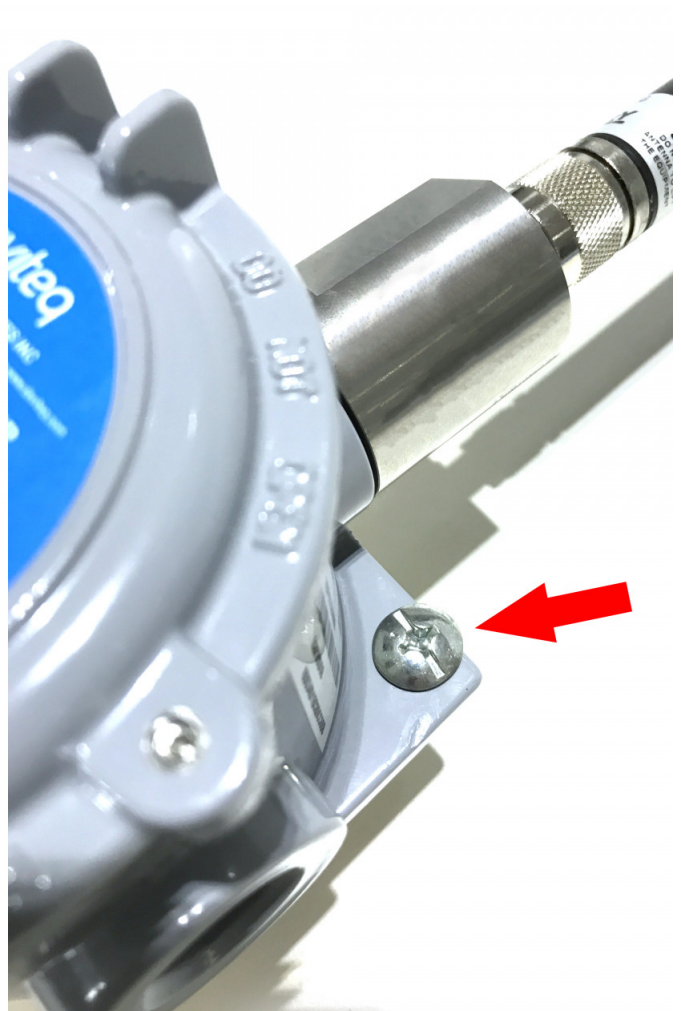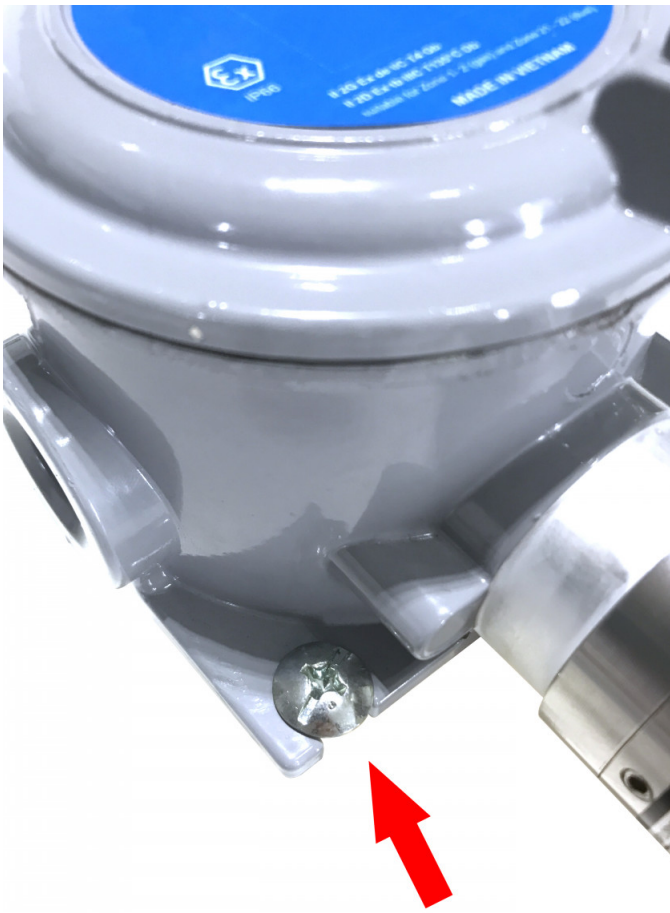


4. ADDING A SIGFOX-READY SENSOR TO SIGFOX BACK-END SYSTEM

This instruction is applied to all kinds of Sigfox-Ready sensors produced by Daviteq.

Step 1: Log in to the sigfox backend website

A screenshot of a web browser showing the Sigfox backend login page. The address bar displays 'backend.sigfox.com/auth/login'. The page features the Sigfox logo at the top left. Below it, there are two input fields: 'Email address' with an envelope icon and 'Password' with a lock icon. To the right of the password field is a checkbox labeled 'Remember me for one week'. A 'Sign in' button is located at the bottom right of the form area.


← → ↻ 🔒 backend.sigfox.com/auth/login

 sigfox


Remember me for one week ☐

Sign in


Step 2: Click on Device

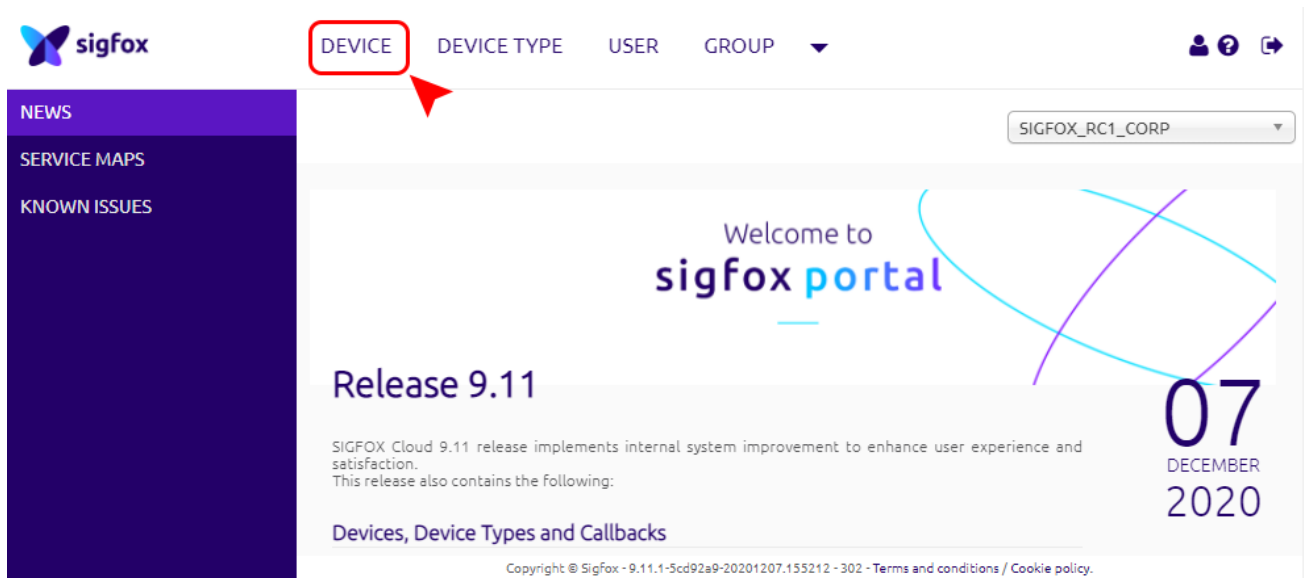

Step 3: Click New → Select a group

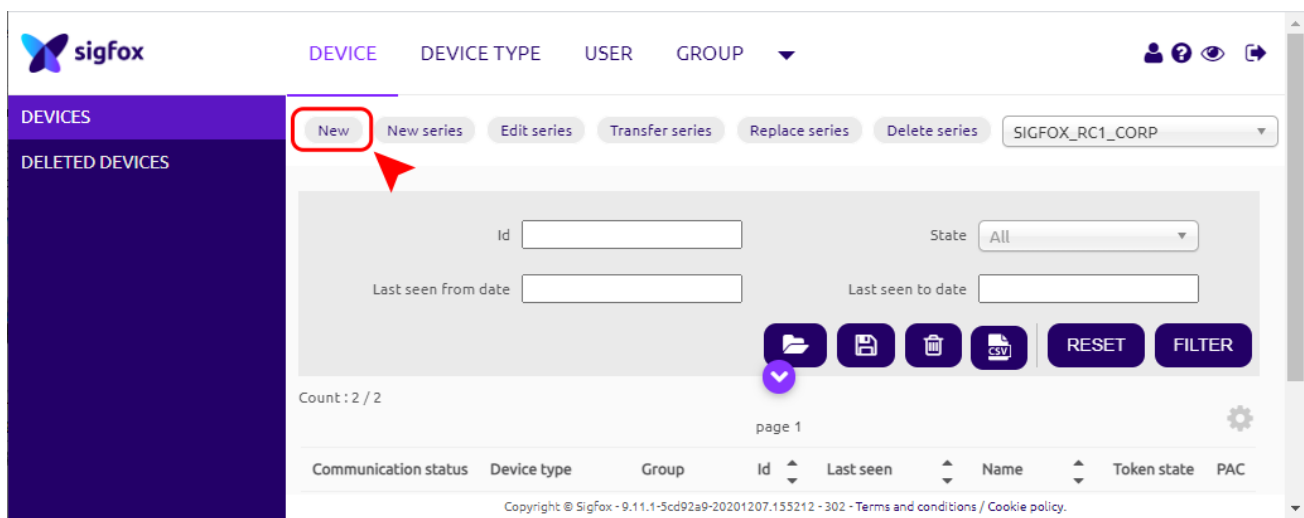


Step 4: Fill in the required information

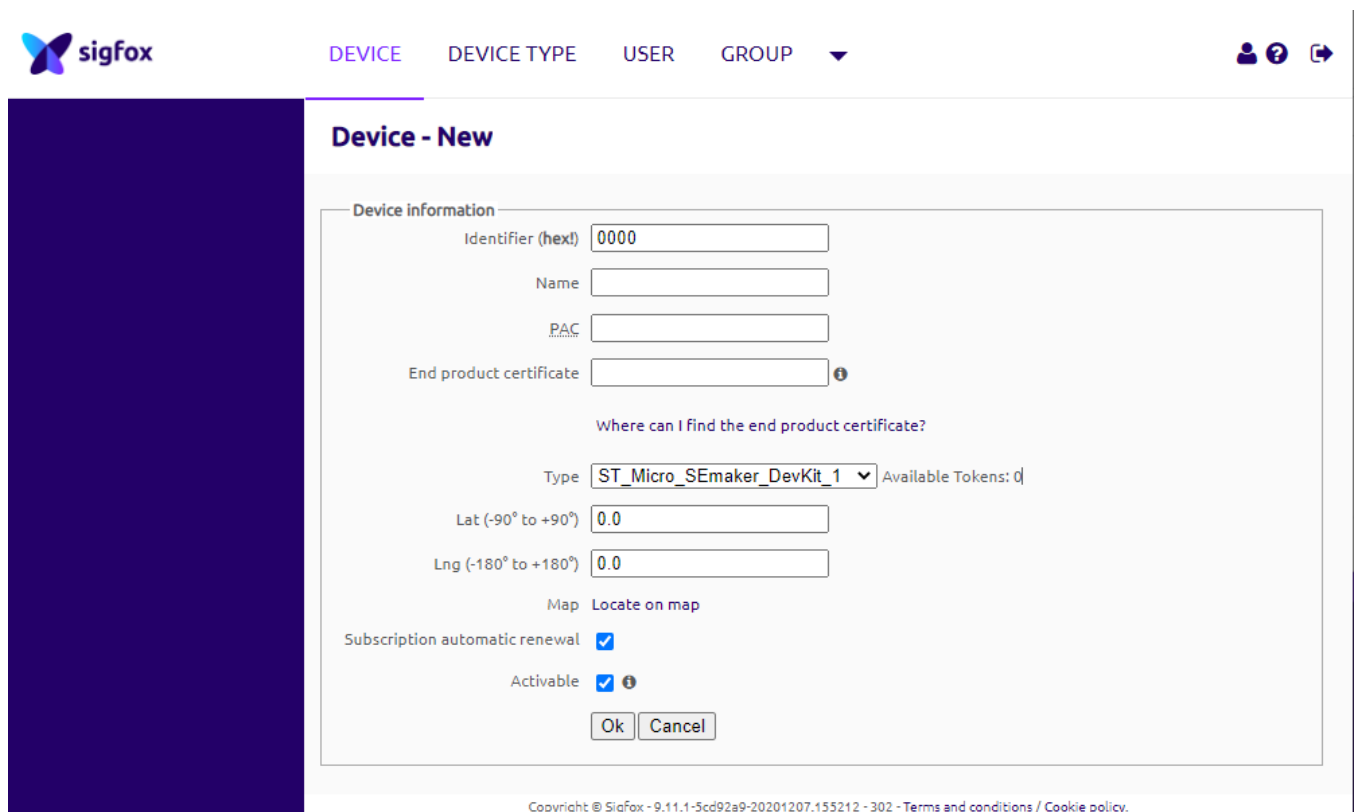

Note: Some of our products may not have end product certification in time, to add the product to Backend Sigfox please follow the steps below.

Click on the text as shown below

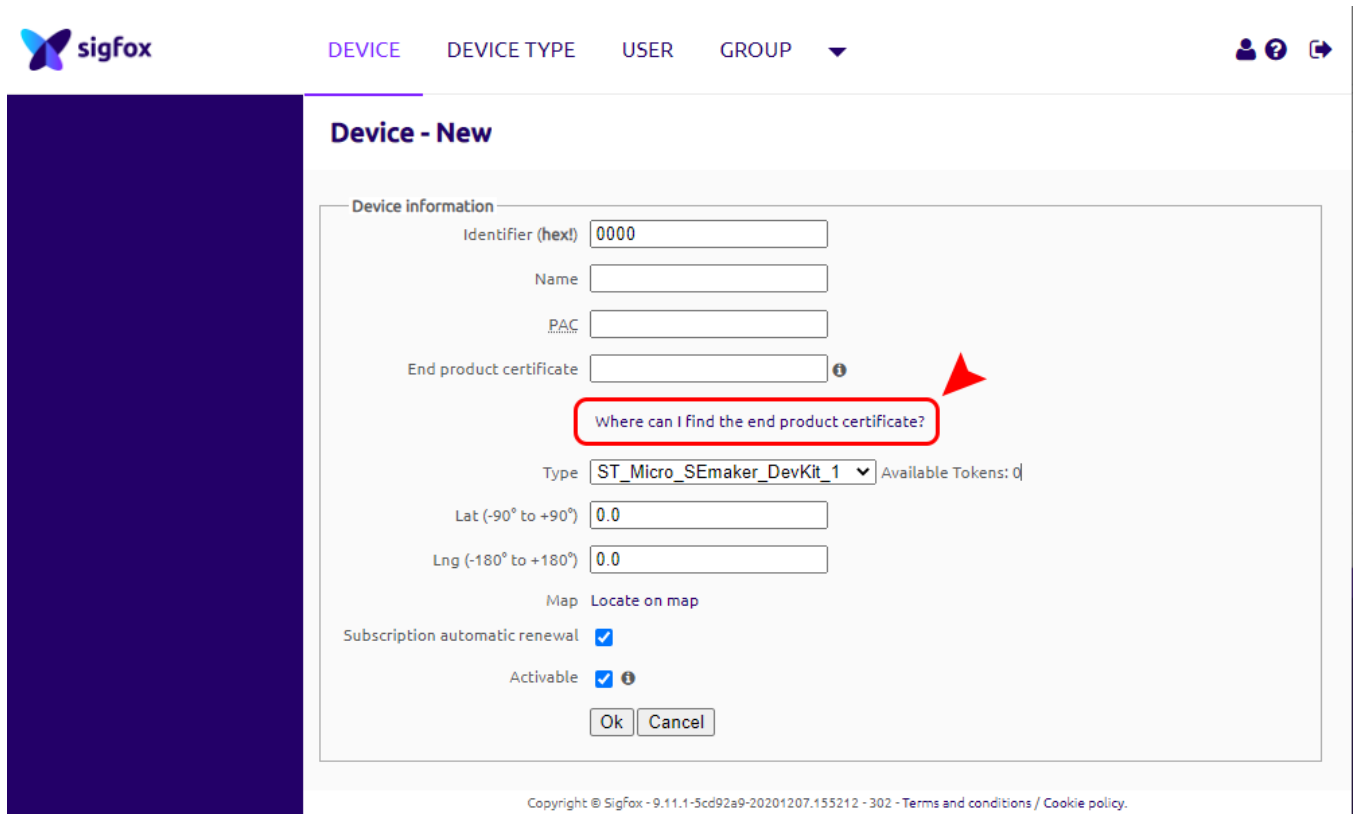

The screenshot shows the 'Device - New' form in the Sigfox backend. The form is titled 'Device - New' and contains several input fields and checkboxes. The 'End product certificate' field is highlighted with a red box, and a red arrow points to it. The text 'Where can I find the end product certificate?' is written inside the red box. The form also includes fields for Identifier (hex!), Name, PAC, Type, Lat, and Lng, as well as checkboxes for Subscription automatic renewal and Activable. The footer of the form contains the copyright information: 'Copyright © Sigfox - 9.11.1-Scd92a9-20201207.155212 - 302 - Terms and conditions / Cookie policy.'

Device - New

Device information

Identifier (hex!) 0000

Name

PAC

End product certificate

Where can I find the end product certificate?

Type ST_Micro_SEmaker_DevKit_1 Available Tokens: 0

Lat (-90° to +90°) 0.0

Lng (-180° to +180°) 0.0

Map Locate on map

Subscription automatic renewal ☒

Activable ☒ ⓘ

Ok Cancel

Copyright © Sigfox - 9.11.1-Scd92a9-20201207.155212 - 302 - Terms and conditions / Cookie policy.

Check the box as shown below to register as a prototype

Device - New

Device information

Identifier (hex)

Name

PAC

End product certificate 

Where can I find the end product certificate?

The device vendor should provide the end product certificate number. If not, please use the search bar below:

Otherwise you can contact your [Sigfox distributor service desk](#)

If the device has not obtained an end product certificate yet, then you can register as a prototype.

☒ Register as a prototype (remaining prototypes which can be registered in your group: 1000)


Type Available Tokens: 0

Lat (-90° to +90°)

Lng (-180° to +180°)

Map [Locate on map](#)

Subscription automatic renewal ☒

Activable ☒ 

🔄 Revision #25

★ Created Wed, Jun 29, 2022 6:53 PM by [Lộc Vĩnh Nguyễn](#)

✎ Updated Wed, Nov 30, 2022 3:02 AM by [Kiệt Anh Nguyễn](#)