

# Instructions for converting Daviteq Sigfox Exd-Pressure device to Daviteq LoraWAN Exd-Pressure device.

## 1. Prepare tools:

- 1 pc x Screwdriver
- 1 pc x 12" Wrench
- 1 tube x Thread Lock Glue
- 1 bottle x Cleaning alcohol
- 1 pc x Cleaning cloth
- 1 pc x Grinding tool
- 1 pc x Heat gun



**ScrewDriver**



**Heat Gun**



**ThreadLock Glue**



**Wrench**



**Grinding Tool**



**Cleaning Alcohol**



**Cleaning Cloth**

*Figure 1.1: Tool list*

## 2. Disassemble the Daviteq Sigfox Exd Pressure device:

- Step 1: Unscrew the antenna by turning the antenna counter-clockwise and open the device housing cover by turning the upper housing cover counter-clockwise as a below figure.




*Figure 2.1: Unscrew the antenna and open the housing cover of Daviteq Sigfox Exd Pressure device.*

- Step 2: Grind the excess part inside the housing cover to fit with new LoraWAN main board by grinding tool.




*Figure 2.2: Grind the excess part inside the housing cover.*

- Step 3: Remove the Sigfox mainboard by screwdriver. The position of 3 screws is marked as Figure 2.3.

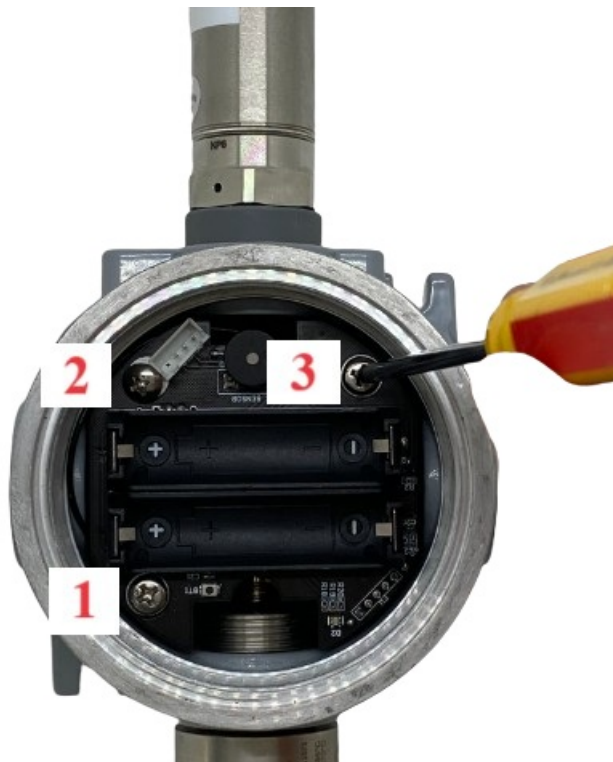

*Figure 2.3: Remove the Sigfox mainboard by screwdriver.*

- Step 4: Unscrew the antenna cable and cut out the 2 wires connecting the pressure sensor and Sigfox mainboard.

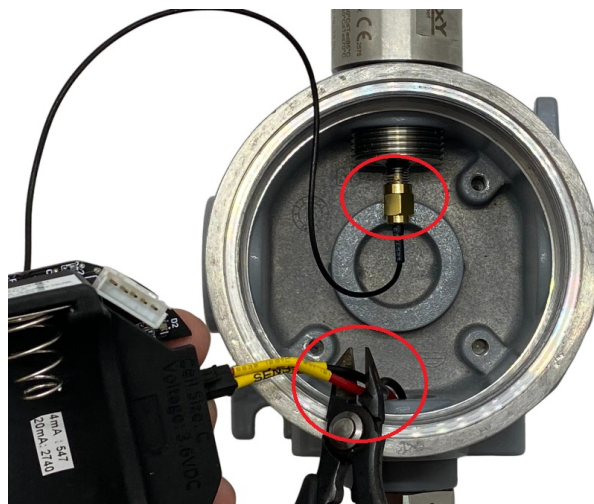

*Figure 2.4: Unscrew the antenna cable and cut out the connecting the 2 wires.*

- Step 5: Heat up the connecting thread between the pressure sensor and housing by heat gun (recommended heat with temperature of 300 oC in 20-30 minutes) to melt the thread lock glue for easy disassembling. Then unscrew the sensor by turning counterclockwise using wrench.



*Figure 2.5: Heat up the connecting thread.*



*Figure 2.6: Unscrew the sensor by turning counterclockwise using wrench.*

- Step 6: Peel off all labels on the housing of Sigfox device.
- Step 7: Clean the housing and thread by alcohol and cloth.

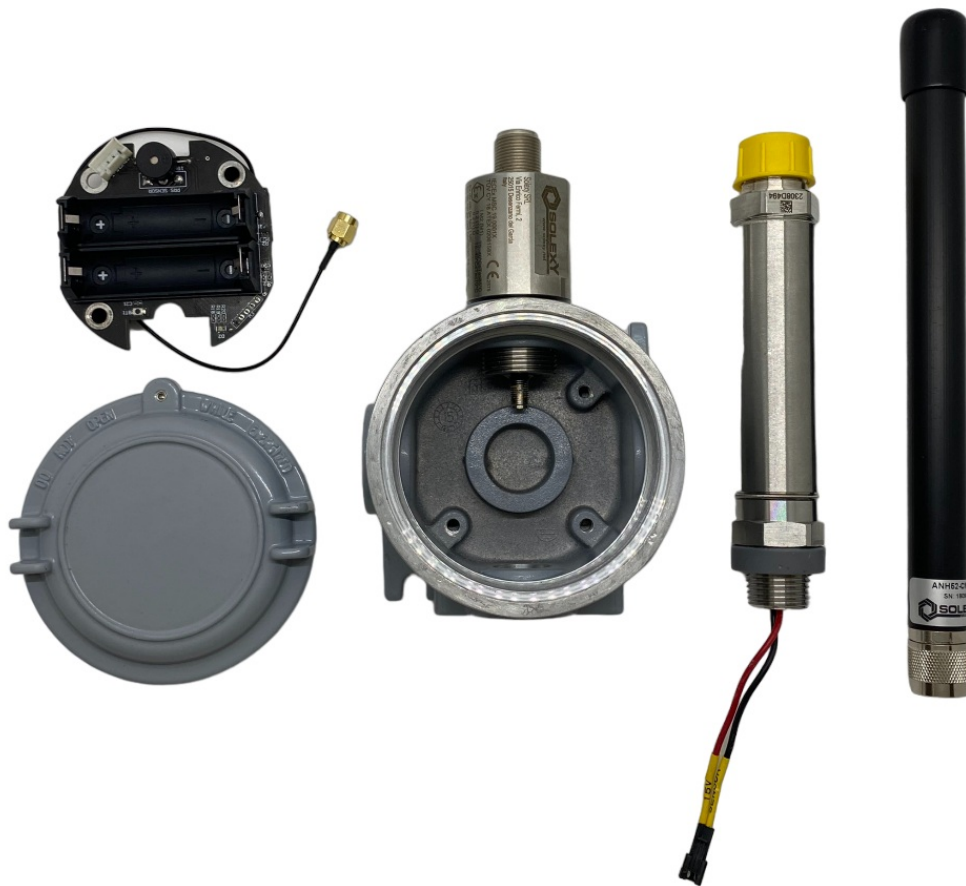


Figure 2.7: Components of Daviteq Sigfox Exd Pressure device after disassembly.

### 3. Assemble the Daviteq LoraWAN Exd Pressure device:

**Note:** Only re-use housing, antenna for converting from Sigfox device to LoraWAN device. DON'T re-use the Sigfox mainboard and pressure sensor.

- Step 1: Apply thread lock glue to the connection thread and screw the new pressure sensor to the housing by turn clockwise.

**Warning:** Do not use too much glue as it will take too long to dry and leak to the mainboard. Recommend using 2-3 drops of glue.





*Figure 3.1: Apply thread lock glue to the connection thread of sensor.*



*Figure 3.2: Screw the sensor to the housing by turning clockwise using wrench*

- Step 2: Select correct LoraWAN mainboard for the sensor in the step 1:
  - 10 bar new sensor will be installed with LoraWAN mainboard having item code on the main board label of WSLRWEX-PPS-10-01
  - 100 bar new sensor will be installed with LoraWAN mainboard having item code on the main board label of WSLRWEX-PPS-100-01
- Step 3: Note out the serial number on the selected LoraWAN mainboard label for later usage in labelling step.
- Step 4: Screw the antenna cable on the LoraWAN mainboard to antenna and plug socket of sensor cable to the socket on the LoraWan mainboard.

**Warning:** Arrange the wires neatly to avoid the wires being stuck.

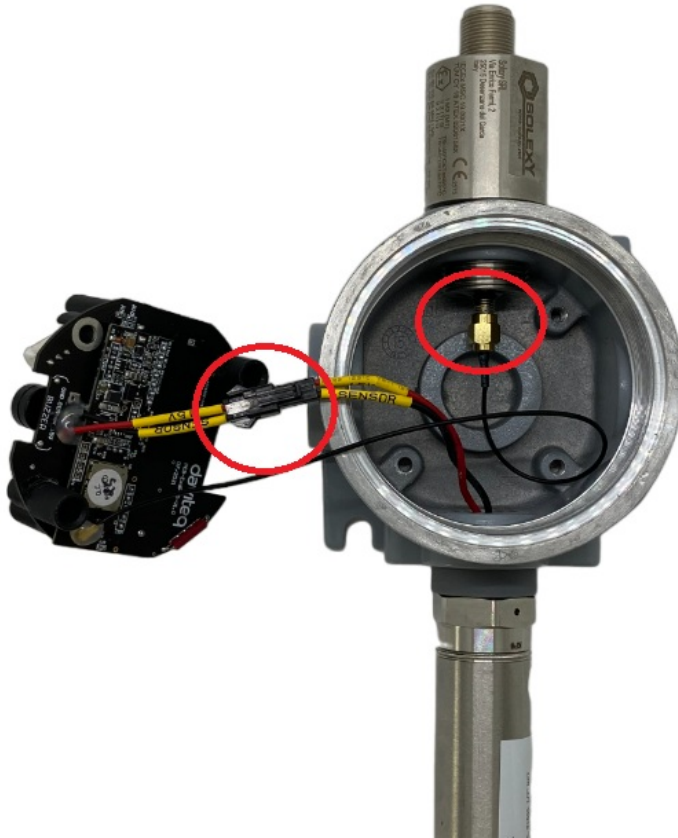


Figure 3.3:

*Screw the antenna cable and plug socket of sensor cable.*

- Step 5: Fix the LoraWan mainboard to the housing in the position as shown by screwdriver. The position of 2 screws is marked as Figure 3.4.



Figure 3.4: Position of 2 screws on to screw the LoraWan mainboard to the housing.

- Step 6: Stick the sensor manual QRCode label inside the housing cover as Figure 3.5.



*Figure 3.5: Position of the manual QRCode label inside the housing cover.*

- Step 7: Screw the housing cover and antenna. Make sure Oring is available on housing cover.



*Figure 3.6: Screw the housing cover and antenna.*

## 4. Stick labels on the housing of Daviteq LoraWAN Exd Pressure device:

There are 4 types of labels for the LoraWAN Exd Pressure device:  
 1 x LoraWAN label,  
 1 x Device information label





1 x Magnet reed-switch label  
1 x Manual QRCode of Daviteq LoraWAN Exd Pressure firmware3 device label  
And 4 types of label and LoraWAN mainboard in the package.

- Step 1: Screw the housing cover tightly then stick the LoraWAN label vertically. The direction of the label as Figure 4.1.



Figure 4.1: Position and direction of the LoraWAN label on the housing cover.

- Step 2: Stick the device information label at the position at Figure 4.2.

⚠ Note: Make sure the serial number on the label is the same as one on the main board label. The serial number on the mainboard label is noted out in step 3 of section “3. Assemble the Daviteq LoraWAN Exd Pressure device”

⚠ The the device information label is next to sensor mounting semi-circular hole.



Figure 4.2: Position and direction of the device information label on the housing

- Step 3: Stick the magnet reed-switch label as position as Figure 4.3.



Figure 4.3: Position of the magnet reed-switch label on the housing

- After completing labelling, the sensor will be as below figure 4.4.

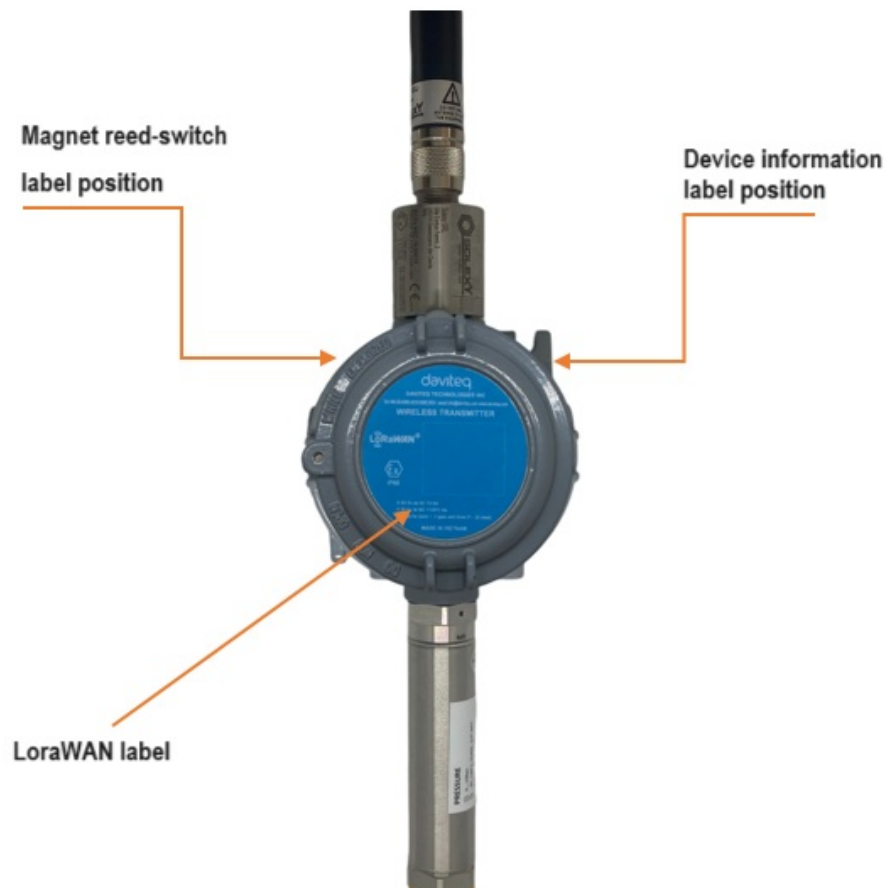


Figure 4.4: Position of labels after labeling process is completed

## 5. Check operation of the LoraWAN device after converting

- Follow instruction at section 1.7 Guide for Quick Test of WSLRWEX-PPS firmware manual.  
Link of online manual: <https://www.iot.daviteq.com/manual-for-wireless-sensors/manual-for-wslrwex-pps-%7C-fw3>

Please note that, log in is required to access the online manual of WSLRWEX-PPS firmware 3. The user needs to visit <https://www.iot.daviteq.com> to register the user for accessing the online manual.

---

🔄 Revision #13

★ Created Thu, Jan 25, 2024 2:04 AM by [Vũ Hoàng Anh Tài](#)

✎ Updated Wed, Jan 31, 2024 8:44 AM by [Phan Van Luc](#)