

2. QUICK GUIDE

Reading time: 15 minutes

- Finish this part so you can understand and put the device in operation with the default configuration from the factory.

2.1. What is the PINEX?

PineX is an industrial-grade outdoor LoRaWAN® Gateway, designed to operate reliably in the harshest environments—from scorching deserts to freezing Arctic conditions, and even hurricane-force winds up to 200 km/h. With IP67-rated waterproof and dustproof protection, an extended temperature range of -40°C to +70°C, and Dual LoRa Antennas for extended coverage, PineX ensures uninterrupted, long-range connectivity even in extreme weather conditions. Supporting all global LoRaWAN frequency bands, PineX integrates a built-in Network Server, Node-RED, and VPN security, enabling fast, cost-efficient, and secure IoT deployments. Designed for Smart Cities, Industrial Facilities, Smart Agriculture, and remote IoT applications, PineX is the ultimate rugged, high-performance LoRaWAN Gateway for mission-critical operations.


2.2. What's in the package?



The package includes:

- 01 x LoraWAN PINEX Gateway
- 01 x Lora Antenna
- 01 x WiFi Antenna (optional)
- 01 x Power Adapter
- 01 x Converter cable
- 01 x PoE Injector
- 01 x Mounting Accessories

2.3. Product Overview

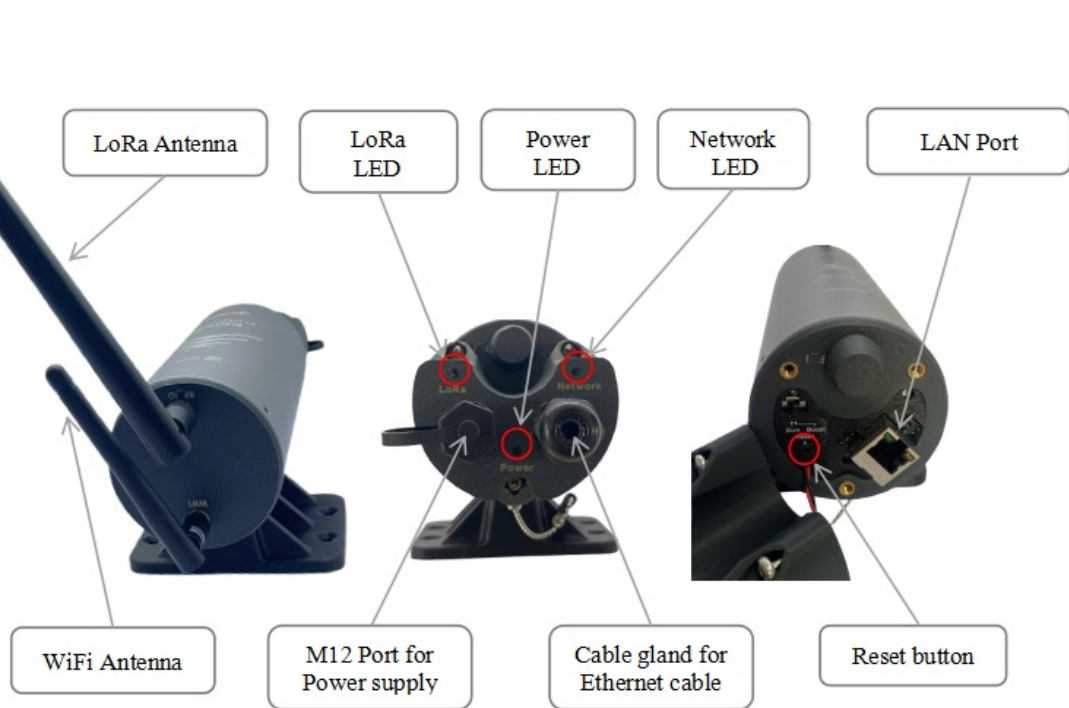

- **LED Functions**

LED Functions	Constant	Flashing	Off
Power	Power On	None	OFF
Network	Initializing	Internet Available	Disconnected
LoRa	LoRa Working	Initializing	LoRa Not Working

- **RESET Button**

The button is deactivated in firmware 4

2.4. Installation

Startup the LoraWAN Gateway through the following steps

Step 1: Install the antenna of the LoRaWAN Gateway

Install the Lora antenna and WiFi antenna in the correct position. Make sure the antenna and Gateway are tightly connected.




Step 2 : Use the screw driver to remove the three screws, then open the gateway cover.



Step 3: Connect the Ethernet cable to the Gateway

Connect the Ethernet cable into LAN port.

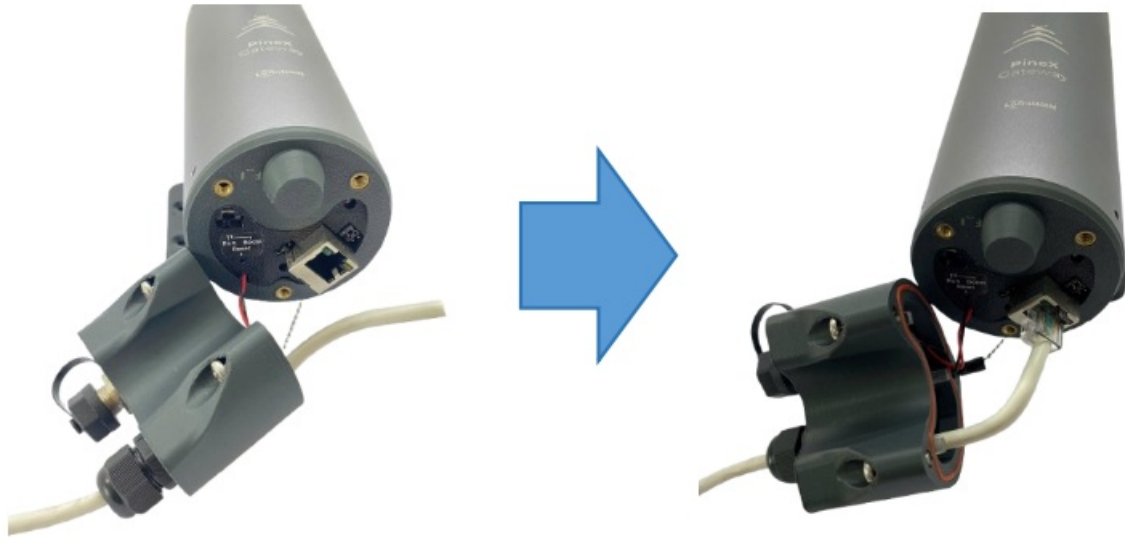

Step 4 : Close the gateway's cover, then use the screw driver to lock the 3 screws.

Step 5 : Power up the Gateway through M12 port



2.5. Mounting

Step 1: Select the installation location. The surface must be flat.


Step 2: Based on the dimensions of the gateway's base, drill four holes into the wall. Then, insert wall anchors into the drilled holes.

Step 3:

For economy gateway version, use screws to secure the gateway onto the drilled surface as below



For standard gateway version, install the bottom frame to the wall/structure first by using 4 provided screws.

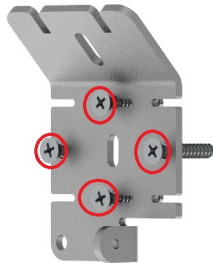

Then insert the device to the slot then fix by a screw



2.6. Configure the LoRaWAN Gateway

2.6.1 GUI Access

Default mode of Daviteq Gateway is DHCP. Once gateway is turned on through plugging in the DC adapter, it will automatically link to available servers. Gateway's IP address can be found from the DHCP server. Access Gateway Web UI via the DHCP IP on browser. The default username is "admin", and the password is "public"

⚠ By default, the gateway is configured to use DHCP. Therefore, it must be connected to a network with an active DHCP server in order to access the Web GUI.

⚠ If the gateway is to be used in a static IP network without DHCP, it must firstly be connected to another active DHCP server to access the configuration interface to configure static IP for the gateway. Once the initial configuration is complete, the gateway can then be moved to the static IP network. Details of static IP configuration for the gateway are in sub-section of **WAN SETTINGS** in section of **2.2.6.2 Network WAN configuration**

⚠ In some company with strict IT regulations, the gateway MAC address must be added to company network white


list for proper connection.

To access the GUI, follow these steps:

Step 1: Use a computer to connect to the network that the gateway is connected. The computer can connect to that network via WiFi or Ethernet.

Step 2: Use the IP scanning software to find the **IP address** of the gateway based on its **Mac address** that can be found on the back label.


i Access [this link](#) to get a free IP scanning software on the internet

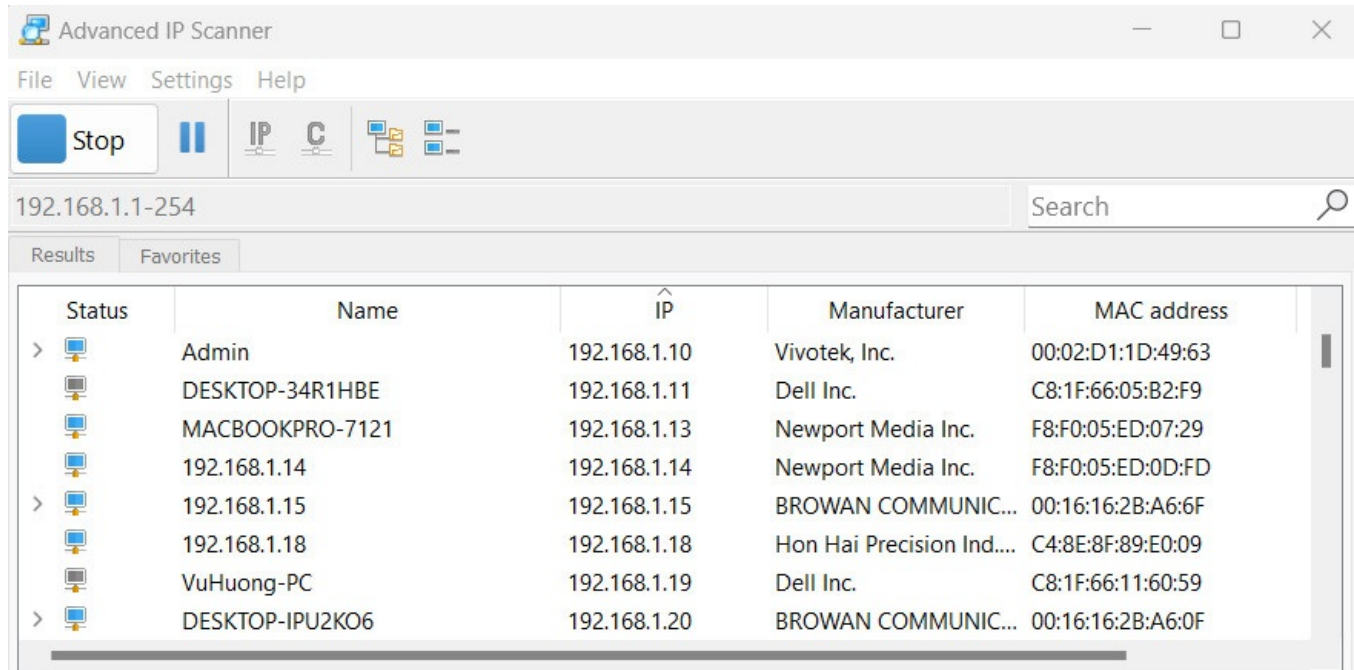


Step 3: Enter the **IP address** of the gateway in the web browser to access the configuration interface.

w Must add port 4050 after the IP address. For example, If the IP address of the Gateway is **192.168.1.21** , you have to enter **192.168.1.21:4050** in web browser, then the GUI will be displayed.

i The default **username** is **admin** and default **password** is **public**. Please check updated username and password on the gateway label.

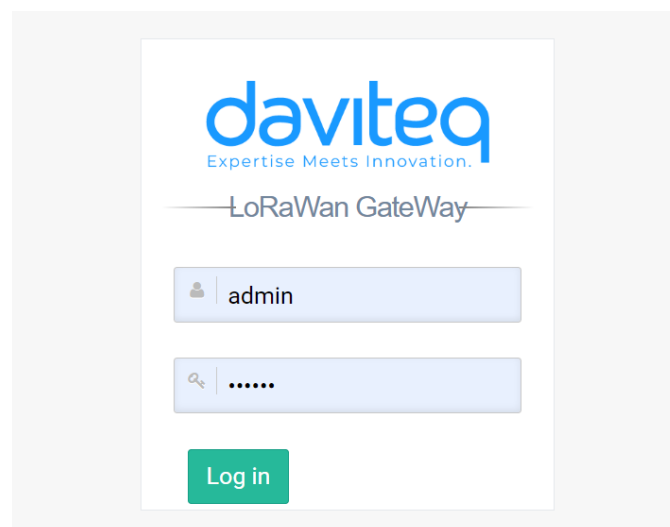

i After login successfully, the general information of the gateway will be display at **general information** tab.

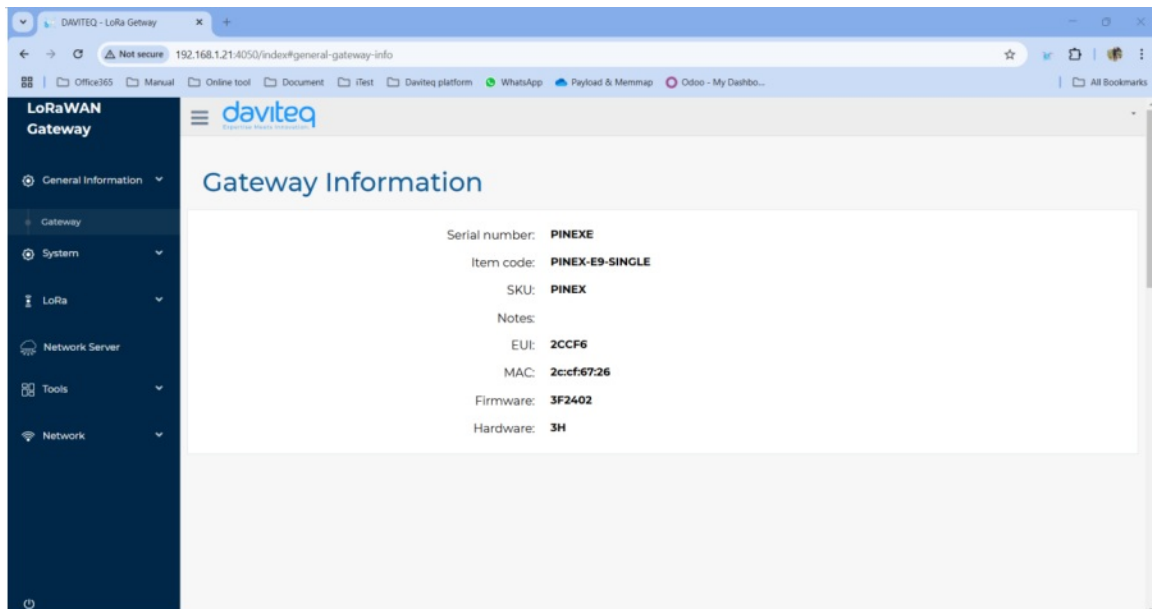


2.6.2 Network WAN configuration

This category shows current WAN settings. This category is further divided into three sectors: WAN Status, Data Statistics and WAN Settings.


- **WAN Status**

The current network status will be shown on this page.

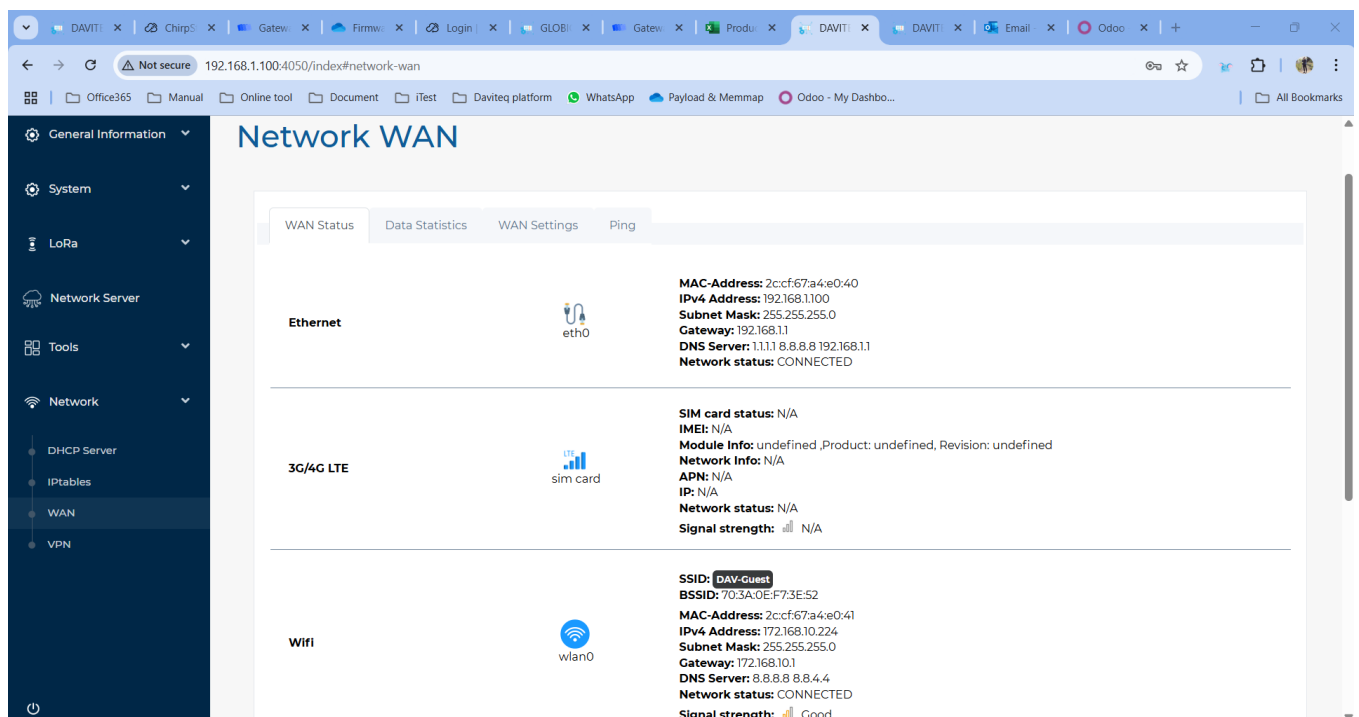

- **WAN Statistics**

Statistics on the gateway's used data capacity are shown in this section.

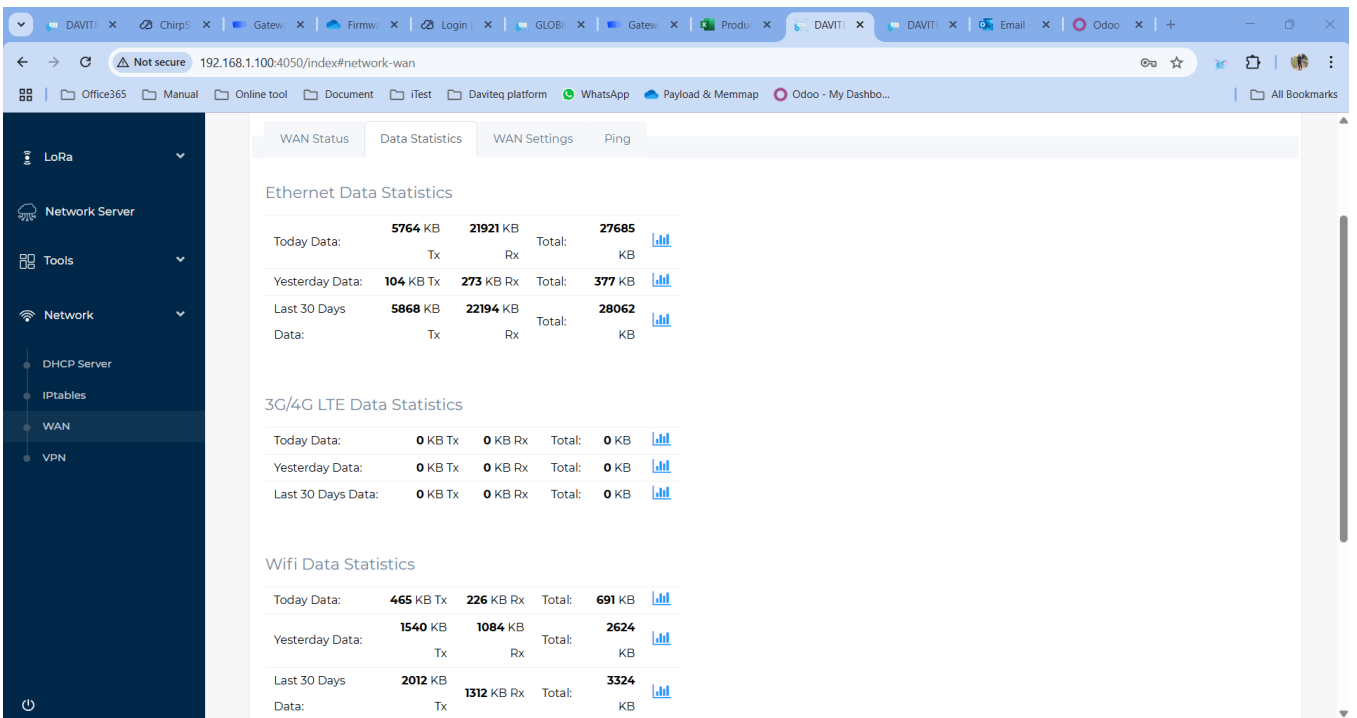


• **WAN Settings**

Daviteq Gateway supports internet connectivity via both Ethernet and Wi-Fi (optional). When both Ethernet and Wi-Fi are available, the system will prioritize Ethernet. The network mode will switch automatically based on availability.

Follow the steps below to set up the **static IP** for the gateway:


- Step 1:** In the **Network** section, select **WAN**.
- Step 2:** Click on the **WAN Settings** tab at the top.
- Step 3:** In the **Configuration** field, select **Ethernet WAN**
- Step 4:** In the **WAN type** field, select **Static IP**
- Step 5:** Enter the Static IP information, including **IP Address, Subnet Mask, Gateway, DNS Server**
- Step 6:** Click the **Apply** button to save and apply the new configuration.

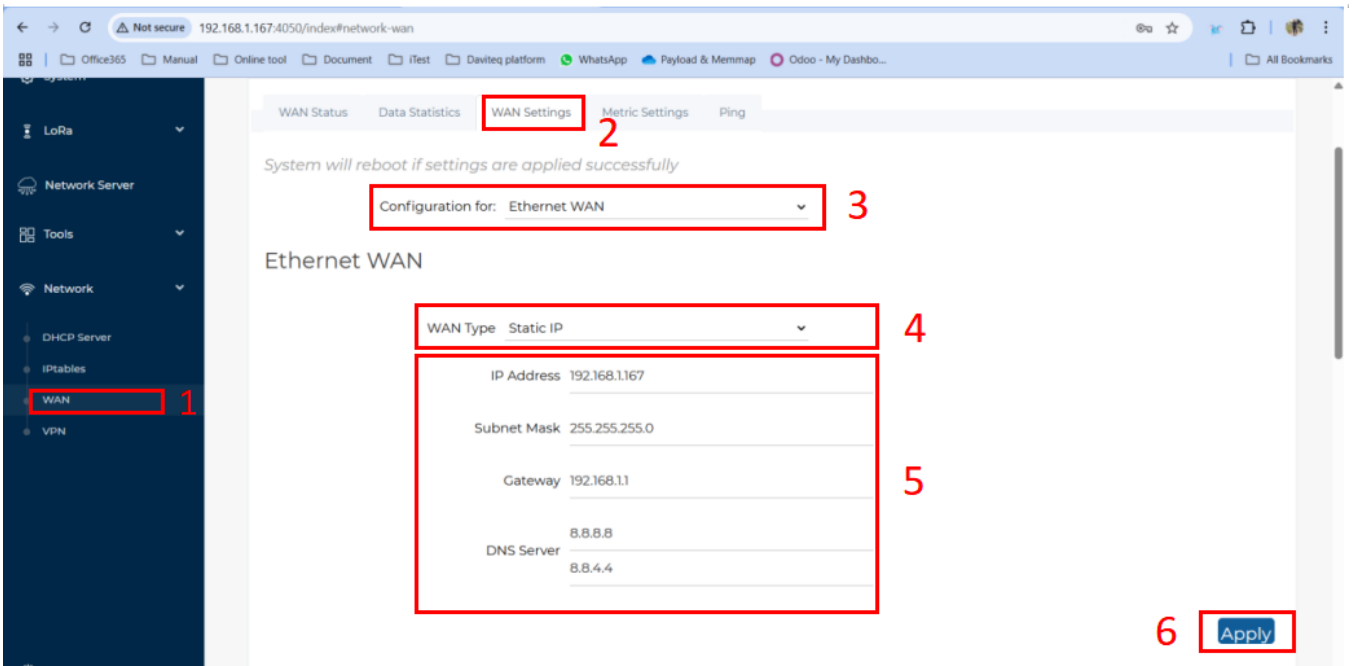

When the static IP is applied, the Web GUI will be logged out automatically. To connect the gateway to the internet, the Ethernet cable must be switched to a static IP network. After that, in order to access the gateway GUI again, the computer must be connected to the same network as the gateway.

Follow the steps below to set up the **Wi-Fi** network for the gateway (This feature is only available with the WiFi gateway version)

- Step 1:** In the **Network** section, select **WAN**.
- Step 2:** Click on the **WAN Settings** tab at the top.
- Step 3:** In the **Configuration** field, select **Wi-Fi**.
- Step 4:** Enter the Wi-Fi information, including **SSID (Wi-Fi name)**, **Password**, and **Wi-Fi Type** (default: **DHCP Client**).
- Step 5:** Click the **Apply** button to save and apply the new configuration.

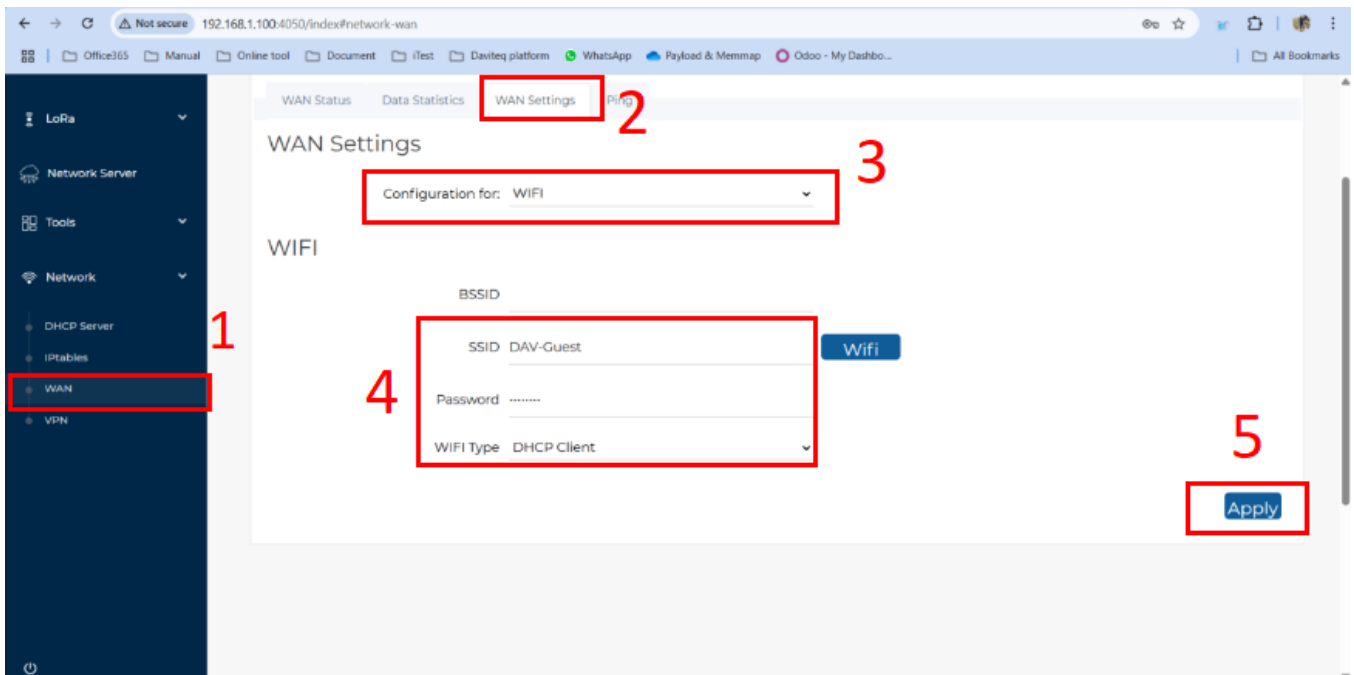

2.6.3. Lora Settings

The LoRa menu consists of the following categories: Package Forwarder and Logs. Configure some basic fields for the gateway operation.

- **Package Forwarder**


Select Packet Forwarder in the left menu, then choose Gateway Info. This page is for setting up the LoRa configuration including Channel Plan, Gateway ID, Server Address, Server Uplink Port, Server Downlink Port, Keep-Alive Interval, Statistics Display Interval, and Push Timeout.

⚠ Need to properly configure the Server Address, Server Uplink Port, and Server Downlink Port fields. These information depend on the Network server.

Choose the channel plan for the gateway, then choose the **Apply button** at the bottom right to save the current configuration

Parameter name	Description	Default value
Channel Plan	The region refers to the specific geographical area where the gateway operates, following the LoRaWAN Regional Parameters defined by the LoRa Alliance	EU868
Gateway ID	The Gateway ID (also known as DevEUI) is a unique identifier assigned to a LoRaWAN gateway.	Unique value
Server Address	The server address in a LoRaWAN gateway refers to the network server's IP address or domain name that the gateway connects to for data transmission and management	localhost

Server Uplink Port	The server uplink port in a LoRaWAN gateway refers to the port number used to send uplink packets	1680
Server Downlink Port	The server downlink port in a LoRaWAN gateway is the port number used for receiving downlink packets	1680
Keep alive interval	The keep-alive interval is the time interval at which a LoRaWAN gateway sends periodic status messages (heartbeats) to the network server to indicate that it is active and connected.	30

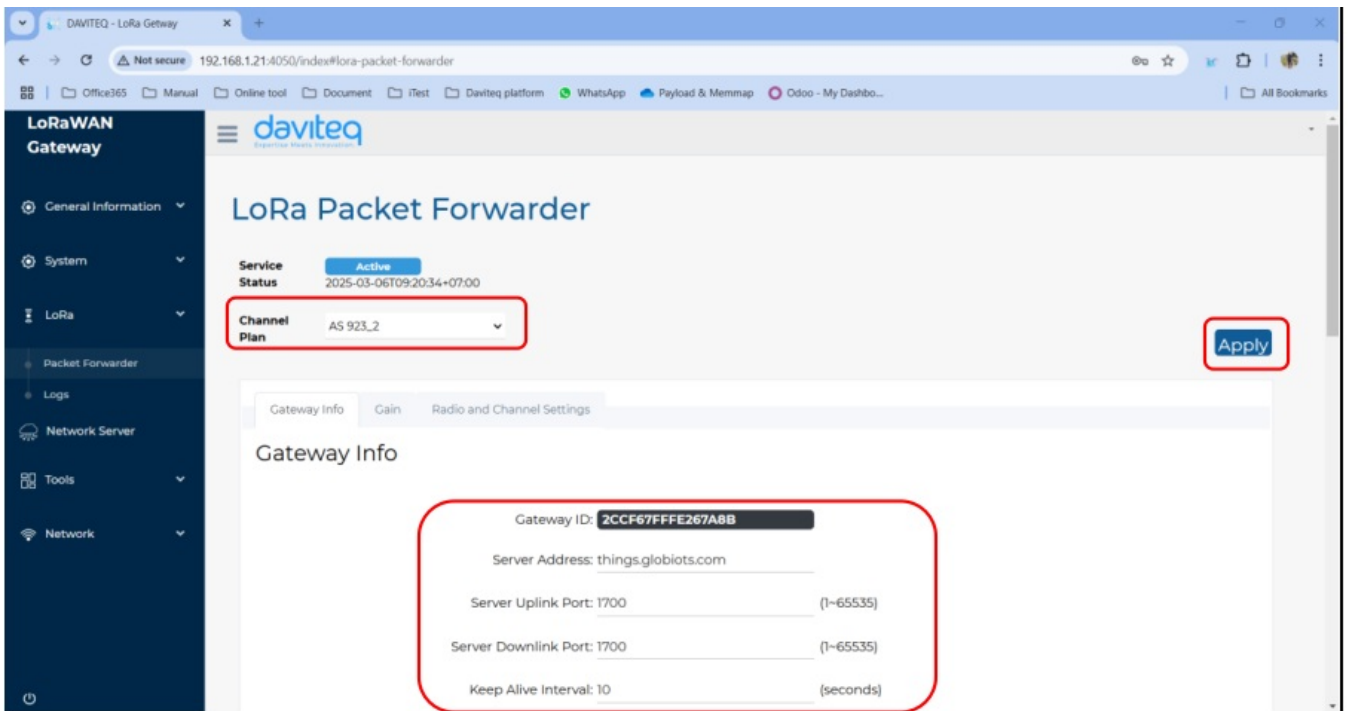

LoRa Packet Forwarder

Service: **Active**
Status: 2025-03-06T09:20:34+07:00

Channel Plan: AS 923_2 Apply

Gateway Info

Gateway ID: 2CCF67FFFE267A8B

Server Address: things.globiots.com


Server Uplink Port: 1700 (1-65535)

Server Downlink Port: 1700 (1-65535)

Keep Alive Interval: 10 (seconds)

- **Logs**

This is the function of monitoring the LoRaWAN network.

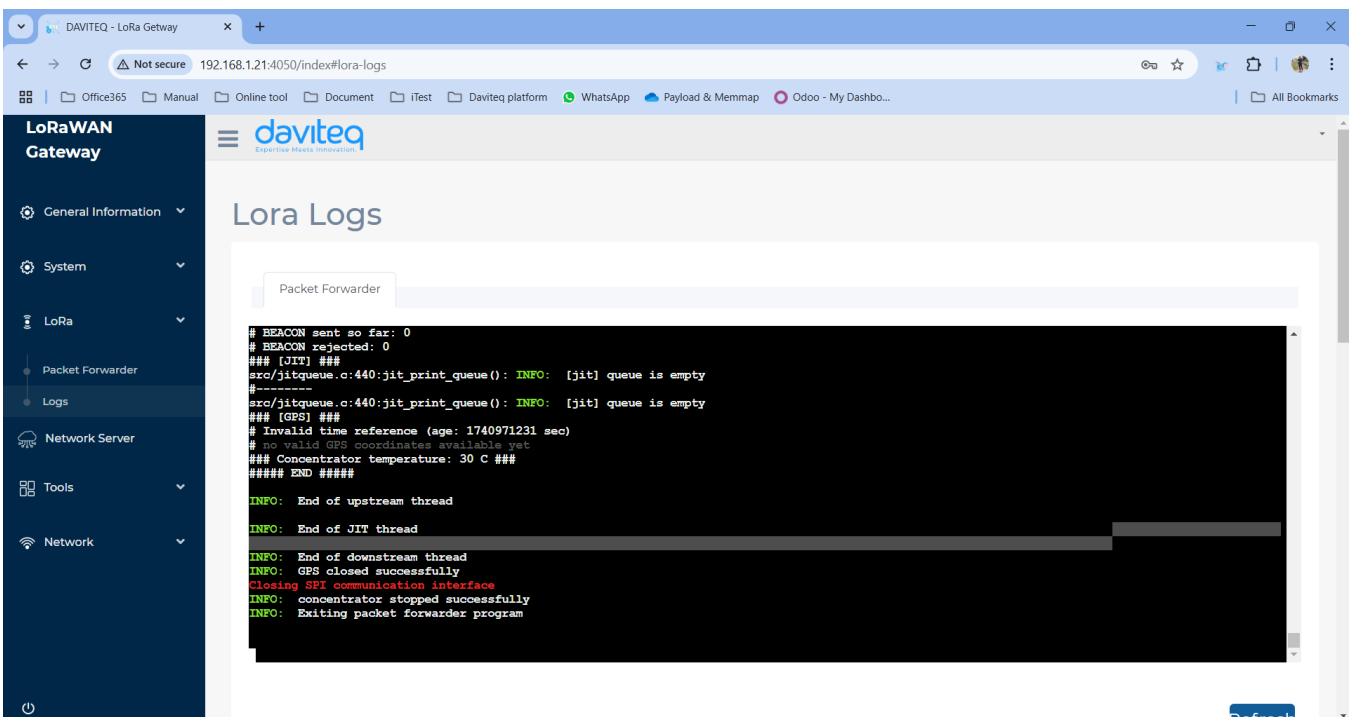

Lora Logs

Packet Forwarder

```
# BEACON sent so far: 0
# BEACON rejected: 0
### [JIT] ###
src/jitqueue.c:440:jit_print_queue(): INFO: [jit] queue is empty
src/jitqueue.c:440:jit_print_queue(): INFO: [jit] queue is empty
### [GPS] ###
# Invalid time reference (age: 1740971231 sec)
# no valid GPS coordinates available yet
### Concentrator temperature: 30 C ###
##### END #####
INFO: End of upstream thread
INFO: End of JIT thread
INFO: End of downstream thread
INFO: GPS closed successfully
Closing SPI communication interface
INFO: concentrator stopped successfully
INFO: Exiting packet forwarder program
```

Refresh

2.7 Add the LoraWAN Gateway to Network Server

2.7.1 Add the LoraWAN Gateway to Embedded Chirp Stack Network Server

Please follow instruction at link:

[Instruction to configu... | Online Product Manuals & Datasheets](#)

2.7.2 Add the LoraWAN Gateway to External LoRaWAN Network Server

To give an example, please follow the instructions in [this link](#) to add LoraWAN gateway to The things Stack network server

2.8 Activate and configure the embedded Node RED development tool

Prerequisite:

The Embedded Chirp Stack Network Server in the PINEX gateway must be active and configured properly to forward data to embedded Node RED development tool. Details to activate and configure embedded Chirp Stack are at the link: <https://daviteq.com/en/manuals/books/manual-for-lorawan-sensor/page/instruction-to-configure-embedded-chirpstack-network-server-in-pinex-firmware-6>

Please refer the below link for instruction to add the embedded Node RED development tool:

[Instructions to config... | Online Product Manuals & Datasheets](#)

🕒 Revision #17

★ Created Thu, Apr 10, 2025 7:15 AM by [Phi Hoang Tran](#)

✎ Updated Thu, Aug 28, 2025 9:23 AM by [Phan Van Luc](#)