

# USER GUIDE FOR WIRELESS AMBIENT TEMPERATURE SENSOR WS433-M12F-ATE

WS433-M12F-ATE-MN-EN-01

FEB-2020

*This document is applied for the following products*

SKU	WS433-M12F-ATE	HW Ver.	2.5	FW Ver.	5.04
Item Code	WS433-M12F	Wireless Sensor Transmitter 433Mhz, compatible with all DULP sensor modules, AA 1.5VDC battery, IP67			
	ATE-11	Compact ambient Temperature Sensor DULP module, M12-male connector			
	ATE-12-300	300mm Cable type ambient Temperature Sensor DULP module, M12-male connector			
Notes	* Must order for both wireless transmitter and sensor module				

## 1. Functions Change Log

<b>HW Ver.</b>	<b>FW Ver.</b>	<b>Release Date</b>	<b>Functions Change</b>
2.5	5.04	NOV-2019	<ul style="list-style-type: none"><li>Change RF data rate by button</li></ul>

## 2. Introduction

Wireless Ambient Temperature Sensor is a combination of wireless sensor transmitter WS433-M12F and ambient temperature sensor ATE, it utilizes Digital temperature sensor delivers high accuracy measurement in range -35 to +70oC. The wireless portion is Sub-GHz technology from Texas Instruments allows long range transmission at ultra-low power consumption. It will connect 2-way wirelessly to the wireless co-ordinator WS433-CL to send data and receiving the configuration. It can be configured the operation parameters like data sending interval, health check cycle...remotely from Globiots platform or via ModbusRTU software (thru the WS433-CL). Its default data rate is 50 kbps, can be switched to 625 bps to increase the communication range. It can last up to 10 years with a single AA battery. There are a lot of applications as environment monitoring for office, warehouse, data center, hospital, agriculture...

## TEMPERATURE SENSOR FITTED WITH WS433-M12F



COMPACT SENSOR  
ATE-11



CABLE TYPE SENSOR  
ATE-12

WS433-M12F-ATE-H1.PNG

## 3. Specification

SENSOR SPECIFICATION :	
Sensor	Digital type, factory calibrated, IP67, immersible to ice-water for quick validation
Measuring range	-35 .. + 70 oC
Accuracy & Resolution	+/- 0.5oC, 0.125oC
Material	PA plastic with PVC cable
Electrical connection	M12-male connector
WIRELESS SPECIFICATION :	
Data speed	Up to 50kbps
Transmission distance, LOS	500m
Antenna	Internal Antenna, 3 dbi
Battery	01 x AA 1.5VDC, up to 10-year operation, depends on configuration
Frequency Band	ISM 433Mhz, Sub-GHz technology from Texas Instrument, USA
International Compliance	ETSI EN 300 220, EN 303 204 (Europe) FCC CFR47 Part15 (US), ARIB STD-T108 (Japan)
Security Standard	AES-128
Operating temperature of PCB	-40oC..+60oC (with AA L91 Energizer)

Housing	Poly-carbonate, IP67
Installation method	L-type bracket SUS304 , by M4 screws or double-sided 3M tape (included)
Product dimensions	125x30x30mm
Net weight (without battery)	< 60g
Box dimension	190x50x50mm
Gross weight	100g

## 4. Product Pictures

### TEMPERATURE SENSOR FITTED WITH WS433-M12F



COMPACT SENSOR  
ATE-11




CABLE TYPE SENSOR  
ATE-12

WS433-M12F-ATE-H1.PNG

### AMBIENT TEMPERATURE SENSORS

ATE-11



ATE-12-XXX



-40 .. + 85 oC    +/- 0.5 oC Accuracy  
IP67 Protection

WS433-M12F-ATE-H2.PNG

### RECOMMENDED BATTERIES

E91 AA Alkaline battery



-18 .. + 60 oC working temperature  
10-year shelf life  
3000 mAh Capacity  
Price: 1X

WS433-M12F-ATE-H3.PNG

L91 AA Lithium battery




-40 .. + 60 oC working temperature  
20-year shelf life  
3500 mAh Capacity  
Price: 3.5X

### BATTERY INSTALLATION




WS433-M12F-ATH-H4.PNG

#### DIMENSION DRAWINGS OF COMPACT TEMPERATURE SENSOR

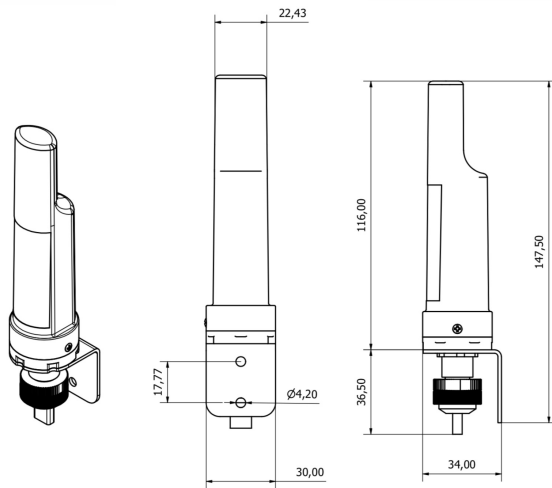


WS433-M12F-ATE-H5.PNG

#### DIMENSION DRAWINGS OF CABLE TYPE TEMPERATURE SENSOR

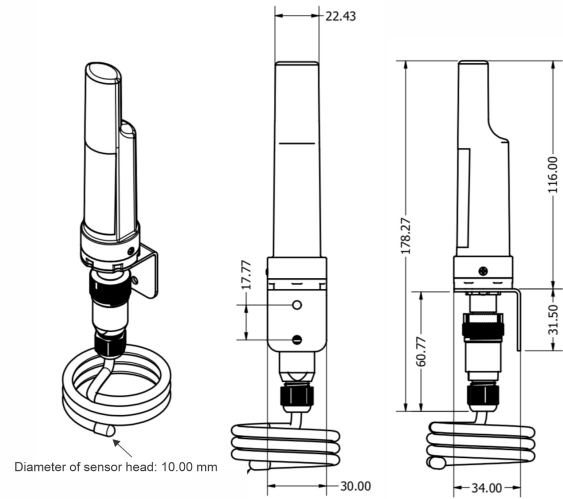

WS433-M12F-ATE-H6.PNG

#### CARTON BOX OF WIRELESS SENSOR

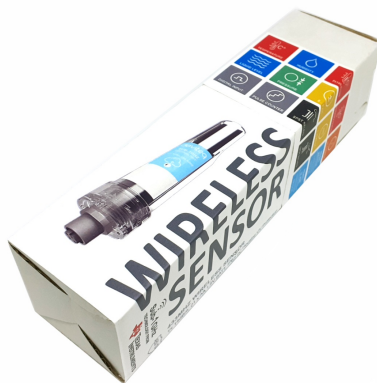

SIZE: 50x50x190MM

WS433-M12F-ATE-H7.PNG

#### PRODUCT PACKAGE INCLUDES



WS433-M12F-ATE-H8.PNG

## 5. Operation principle

**i** When the sensor sampling time interval is reached, For example **2 minutes**, the node will wake up and switch **ON** the power supply to supply the energy to external sensor to start the measurement. Depends on the type and characteristic of external sensor, the sensor will take a certain time to finish the measurement.

**For example:** the measurement time is 200mS, after this time, the node will read the value of sensor, node will switch OFF power supply to external sensor to save energy.


The measured value is the raw value of the sensor. The measured value can be scaled according to the following formula:

$$Y = aX + b$$

- **X:** the raw value from the sensor
- **Y:** the calculated value for parameter 1's value or parameter 2's value
- **a:** constant (default value is 1)
- **b:** constant (default value is 0)

So, if there is no user setting for **a** and **b** ==> **Y = X**

The **Y** value will be compared with Lo and Hi threshold. Please refer below the graph of alarm processing.

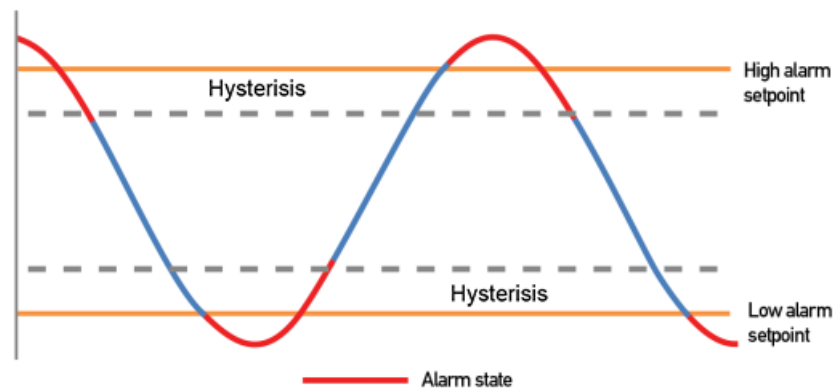

### Status bytes of sensor Node

- Hi-Byte is error code

Error code	Description
0	No error
1	Just exchange the sensor module but node has not been reset ==> please take out the battery for 20s then install it again to reset node to recognize the new sensor module
2	Error, sensor port M12F shorted to GND
3	Error, sensor port M12F shorted to Vcc
4	Error, sensor port M12F shorted each other

- Lo-Byte is sensor type

Error code	Description
0	No error
1	Just exchange the sensor module but node has not been reset ==> please take out the battery for 20s then install it again to reset node to recognize the new sensor module
2	Error, sensor port M12F shorted to GND
3	Error, sensor port M12F shorted to Vcc
4	Error, sensor port M12F shorted each other


### Logic status of parameters

- Hi-Byte is Logic status of parameter 1
  - If parameter 1's value > high threshold 1 => Hi-Byte of Logic status = 1
  - If parameter 1's value < low threshold 1 => Hi-Byte of Logic status = 0
  - If parameter 1 is digital => Hi-Byte of Logic status = parameter 1's value
  - Timer up 1 = (Total time when Hi-Byte of Logic status = 1)
  - Timer down 1 = (Total time when Hi-Byte of Logic status = 0)
  - RisingEdge counter 1 = (Counter value when Hi-Byte of Logic status changes from 0 to 1)
  - FallingEdge counter 1 = (Counter value when Hi-Byte of Logic status changes from 1 to 0)
- Lo-Byte is Logic status of parameter 2
  - If parameter 2's value > high threshold 2 => Lo-Byte of Logic status = 1
  - If parameter 2's value < low threshold 2 => Lo-Byte of Logic status = 0
  - If parameter 2 is digital => Lo-Byte of Logic status = parameter 2's value
  - Timer up 2 = (Total time when Lo-Byte of Logic status = 1)
  - Timer down 2 = (Total time when Lo-Byte of Logic status = 0)
  - RisingEdge counter 2 = (Counter value when Lo-Byte of Logic status changes from 0 to 1)
  - FallingEdge counter 2 = (Counter value when Lo-Byte of Logic status changes from 1 to 0)

### Ambient Temperature Sensor Module (ATE)

- Feature measuring ambient temperature:
  - Measure the ambient temperature, module type IP67
  - Measuring range -20 .. + 85 oC
  - Accuracy  $\pm 0.5$ oC
  - Resolution 0.125oC

## 6. Configuration

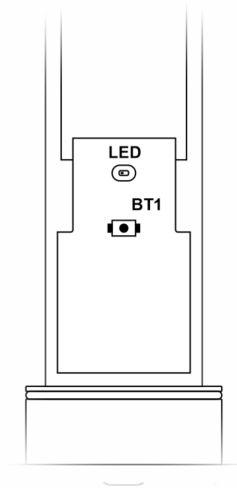

## 6.1 Reset Sensor Node

- **Step 1:** Using Philips screw driver to unscrew M2 screw at the side of housing and carefully pull out the top plastic housing in the vertical direction.
- **Step 2:** Press the button until you see LED flashes 3 times to reset

## 6.2 Data rate configuration 625 kps

- Take off the sensor cover like **Step 1** and press the button until you see LED flashes 2 times for 625 kps option

## 6.3 Wireless sensor configuration with co-ordinator

You can configure the wireless sensor with the co-ordinator by following the steps in the link below:

<http://www.daviteq.com/en/manuals/books/long-range-wireless-co-ordinator-ws433-cl/page/user-guide-for-long-range-wireless-co-ordinator-ws433-cl>

# 7. Installation

## 7.1 Mounting bracket installation

Locate the place where the wireless sensor is mounted, from that locate the position to mount the bracket;

Placing the wireless module on bracket and secure it by 02 x M2 screws (supplied in accessory bag)

**Note:** The bracket can be mounted on the wireless module in both direction, upward or downward

The mounting bracket is made from hard metallic material. The following steps are for mounting this bracket;





## 7.2 Installation location

The bracket will be fixed on the wall or surface by 2 x M4 screws (supplied by customer) or double-sided 3M tape (included in accessory bag in carton box);

- **DO NOT** install the wireless module inside a complete metallic box or housing. The RF signal can not pass through metallic wall;
- This wireless module would be installed a semi-metallic box, because the RF signal can pass through the non-metal wall/are;
- The best case is to install the wireless module inside or Non-metallic box;

Some non-metallic materials: plastic, glass, wood, leather, concrete, cement...

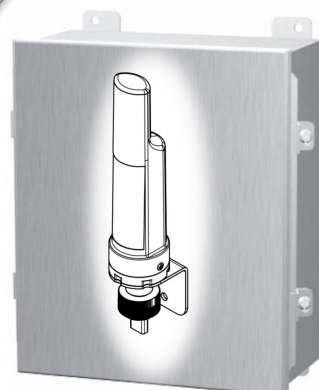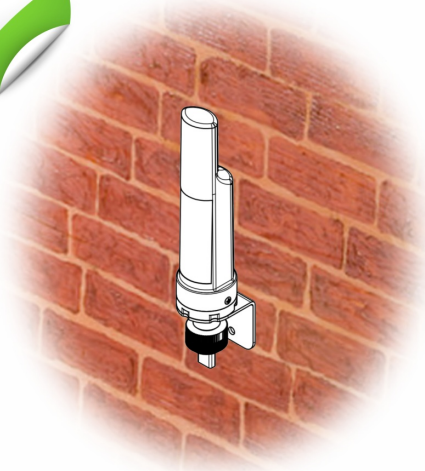

WS433-M12F-ATE-H11.PNG

## 7.3 IO Wiring & Sensor installation

The sensor module has M12-male connector which is matched with M12-female connector on wireless module;

Carefully plug the sensor module onto wireless module, using **HAND** to tighten slowly until stop;

**Note:** please **DO NOT** over tightening by hand or other tool, it can damages the M12 connector;



## 7.4 Power Supply & Battery installation

*Steps for battery installation:*

- Using Philips screw driver to unscrew M2 screw at the side of housing



- Carefully pull out the top plastic housing in the vertical direction





**NOTE:** Because of O-ring, it requires to have much pulling force at the beginning, therefore please do it carefully to avoid the damage of circuit board which is very thin (1.00mm);

- Insert the AA battery, please take note the poles of battery



- Insert the top plastic housing and locking by M2 screw



## 8. Troubleshooting

No.	Phenomena	Reason	Solutions
1	The status LED of wireless sensor doesn't light up	<ul style="list-style-type: none"> <li>No power supply</li> <li>Configuration function of the LED is not correct</li> </ul>	<ul style="list-style-type: none"> <li>Check that the battery is empty or not installed correctly</li> <li>Reconfigure the led light function exactly as instructed</li> </ul>
2	Wireless sensor not connected to co-ordinator	<ul style="list-style-type: none"> <li>No power supply</li> <li>The configuration function of the RF data rate is incorrect</li> </ul>	<ul style="list-style-type: none"> <li>Check that the battery is empty or not installed correctly</li> <li>Reconfigure the RF data rate with the button according to the instructions</li> </ul>

## 8. Support contacts

Manufacturer

**daviteq**

**Daviteq Technologies Inc**

No.11 Street 2G, Nam Hung Vuong Res., An Lac Ward, Binh Tan Dist., Ho Chi Minh City, Vietnam.

Tel: +84-28-6268.2523/4 (ext.122)

Email: [info@daviteq.com](mailto:info@daviteq.com) | [www.daviteq.com](http://www.daviteq.com)

Distributor in Australia and New Zealand

  
**TEMPLOGGER**  
A COOL\* PEACE OF MIND

**Templogger Pty Ltd**

Tel: 1800 LOGGER

Email: [contact@templogger.net](mailto:contact@templogger.net)

🔄 Revision #6

★ Created Fri, Mar 6, 2020 1:56 AM by [Kiệt Anh Nguyễn](#)

✎ Updated Mon, Aug 30, 2021 2:11 AM by [Kiệt Anh Nguyễn](#)