

Instructions to add the Base Stations and Devices to ThingPark Network Server (ThingParkEnterprise SaaS Community)


“Community is a SaaS platform that is available for free to test the Actility network server.

ThingPark Enterprise users can follow those examples to activate base stations and devices on your account.

1. Add Tektelic Model T0005204 to ThingPark Enterprise SaaS Community.


i Please contact the Tektelic Support for your target platform that your base station supports LRR packet forwarder.

1. Log in to your ThingPark Enterprise account via the link: <https://community.thingpark.io/tpe/>
2. Browse on the left panel to **Base Stations**, click the drop-down menu then click **Create**.

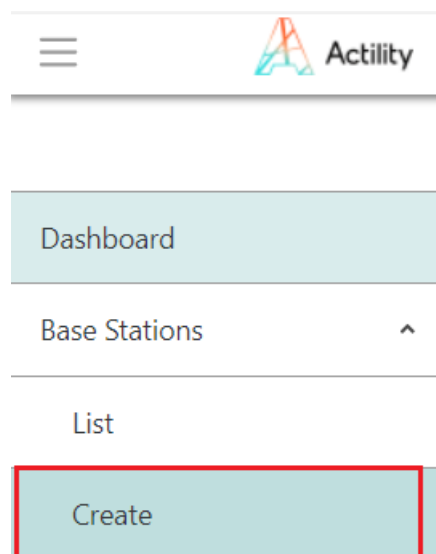

3. Select the base station's **Tektelic**.

If you do not find the Tektelic, click View More Manufacturers.

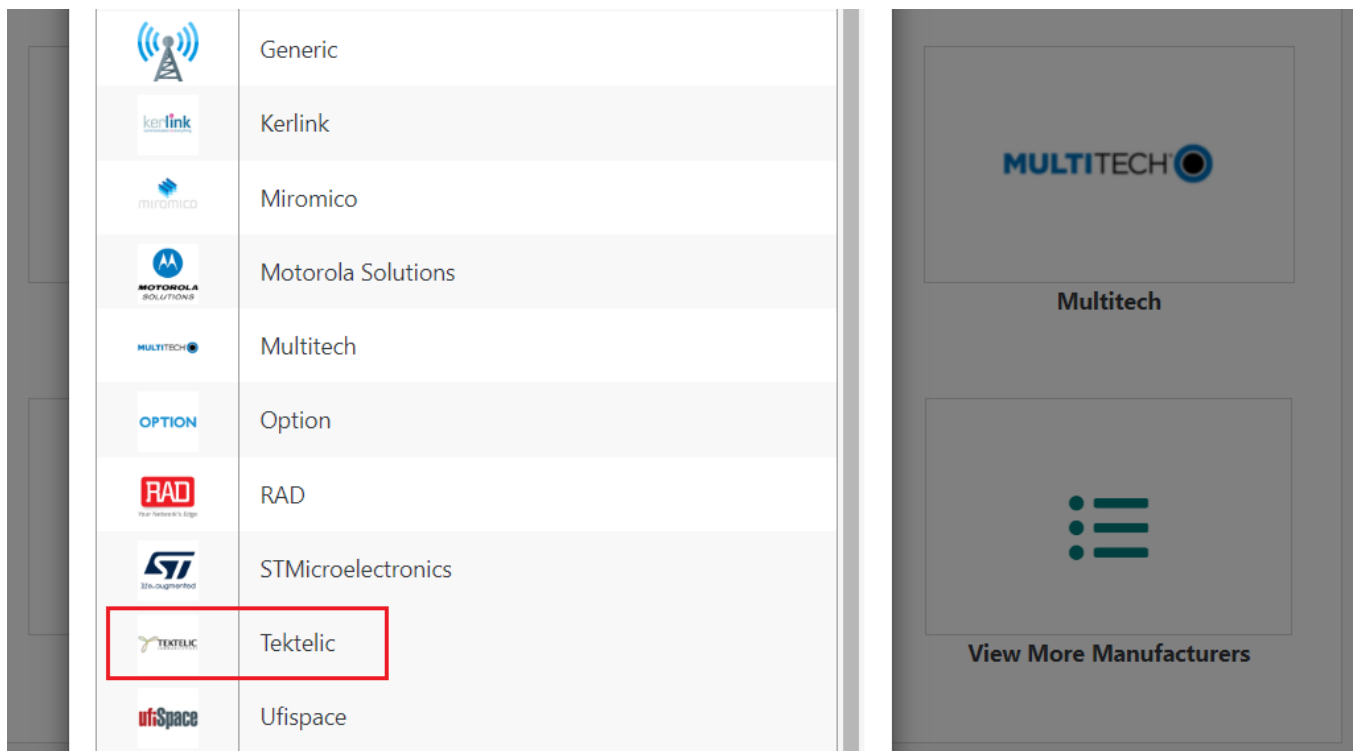

4. On the following screen, select the Model: **Micro 8-channels** from the drop-down list.

Enter Your Base Station Information*

Model* ⓘ

Select your model

- Enterprise 8-channels eu868,as923,kr920,us915,au915,in865,ru864
- Kona Macro eu868,as923,kr920,us915,au915,in865,ru864
- Kona Mega eu868,as923,kr920,us915,au915,in865,ru864
- Micro 8-channels eu868,as923,kr920,us915,au915,in865,ru864

5. Fill the form as below table:

Field	Input field
Name	Base station 1
LRR-UUID	647FDA-647FDA008526
RF region	US 915MHz (8 channels: CH0-CH7)
Public Key	<pre> -----BEGIN PUBLIC KEY----- MIGfMA0GCsGSIb3DQEBAQUAA4GNADCBiQKBgQC/6v1EEK5ftIZHKEyo4o HY3cOWXxMKx6ZSGajzPQzLjcZgmlv82ErucIBe8SVuCW4vj92Squ6KbYavmF 8G9HiM0BzUrb0s8PAilHyuNlzS6h6So2XfMByf7MuYbC131Uy2y2bLRiZuFq5z 4ZHxqmBnG+whArjkgQIDAQAB -----END PUBLIC KEY----- </pre>

Input exactly as above **Input field** column, except **Name** field is user-defined and is different from existing base station name on the network server.


After filling registration form, click **CREATE** to complete adding base station to the network server

2. Add Daviteq's LoRaWAN devices ThingPark Enterprise SaaS Community

ThingPark Enterprise supports all Classes of LoRaWAN® devices. By default, the sensor supports Over-the-Air Activation (OTAA) with local Join Server that is programmed at the factory.

ⓘ Manual provisioning of OTAA devices using a local Join Server. To learn more, see [Activation modes](#).

1. At left panel of the screen of the Thingpark GUI, click **Devices** > **Create** from the dashboard.

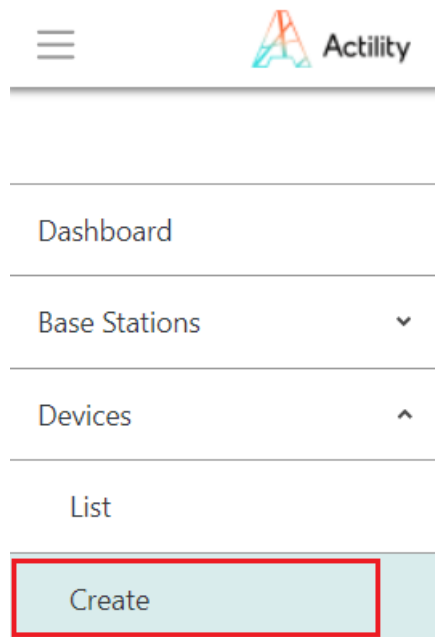

2. Select the **Generic** supported by your device on your screen.



3. Select the Model of **LoRaWAN 1.0.3 revA - class A au915**

Enter Your Device Information*

Model* ⓘ

Type to search models in the list

- LoRaWAN 1.0.3 - class B (AS923-2) as923
- LoRaWAN 1.0.3 - class C (AS923-2) as923
- LoRaWAN 1.0.3 revA - class A au915**
- LoRaWAN 1.0.3 revA - class A as923
- LoRaWAN 1.0.3 revA - class A us915, cn470
- LoRaWAN 1.0.3 revA - class A eu868, eu433, cn779, kr920, in865, ru864
- LoRaWAN 1.0.3 revA - class A (no DL dwell time) as923

4. Fill the form as below table:

Field	Input field
Name	As user-defined
DevEUI	As DevEUI on label of the device

Activation mode	Over-the-Air Activation (OTAA) with local Join Server
JoinEUI	Input JoinEUI. This value read on memory map or on the label of the device. The default value is 0102030405060708
AppKey	Input AppKey. This value read on memory map or on the label of the device. The default value is 0102030405060708090A0B0C0D0E0F10


After filling the registration form, please click **CREATE** to add devices to the network server

3. Send a downlink frame from Thingpark Network Server to the device

You may send a downlink frame to the device from the Device table.

i This functionality is active only when a connection is associated to the device (one of the color codes with a green bullet).

1. Navigate to the left panel, click the Devices's drop-down menu then List.

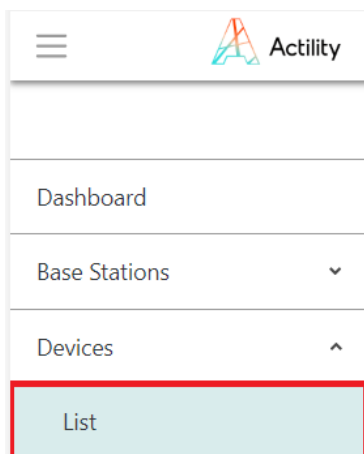

2. Browse the right side in the DEVICES, and select your preferred device to give an action. In this case, Send Downlink.

DEVICES										<div> <div>+ </div> <div>List Map</div> </div>
1-4 of 4		Add filter								Show: 100
		Name	DevEUI	Last Uplink	Packets (24h)	SF	PER	Alarms	Tags	
<input type="checkbox"/>		Sample US915	99-99-99-99-99-99-99	Never	0					...
<input type="checkbox"/>		Sample EU868	35-31-38-31-5F-30-6C-18	14/07/22 - 16:39:07	0	SF7				...
<input type="checkbox"/>		SMT7_979	30-36-36-32-56-39-66-08	Today - 09:35:12	112	SF7	0 %			...
<input type="checkbox"/>		SMT7_740	35-31-38-31-5D-30-64-18	Today - 09:43:07	113	SF7	0 %			...

3. Input "1" to the Port in advance, write your downlink data in the field, and then click VALIDATE.

i The downlink data is added to the device downlink queue, downlinks may be sent only after an uplink from the device.

Send Downlink

Payload ⓘ


Write here...



This field is required.

Port ⓘ

1



CANCEL

VALIDATE

Thanks for the reference link:

- **Managing your radio access network**
 - **Activating a device to your IoT network**
 - **Sending a test downlink frame**
-

🕒 Revision #21

★ Created Thu, Jun 2, 2022 12:51 AM by [Trần Việt Hoàng](#)

✎ Updated Thu, Aug 4, 2022 1:31 AM by [Phan Van Luc](#)