

3. Advanced guide for WSNBM-AQUA

3.1 Principle of Operation

3.1.1. Components of WSNBM-AQUA | FW 1

Daviteq WSNBM-AQUA comprises 04 parts linked internally:

- Pressure Sensor
- RS485 ModbusRTU Master
- Device controller
- CAT-M1/NB IoT modem

3.1.2. The parameters in published topic name

- SKU: Device SKU, read from DEVICE_SKU parameter in the device memory, max 20 characters, data type of string.
- DEVICE NAME: Device name, read from DEVICE_NAME parameter in device memory, max 20 characters, data type of string.
- DEVICE SN: Device serial number, read from DEVICE_SN parameter in device memory, 20 characters, data type of string.
- DEVICE ALIAS: Device alias, read from DEVICE_ALIAS parameter in device memory, max 20 characters, data type of string.
- TOPIC TYPE: Fixed type of the topic. One of below topic type:

- STARTUP
- HEARBEAT
- CONFIG-HEALTH-CHECK
- FORCE
- CYCLE
- CONFIG-RECEIPT
- CONFIG-REQUEST

3.1.3. Primary output values in the payload of published topics

3.1.4. Secondary output values in the payload of published topics

3.1.5. The parameters in subscribed topic name

- SKU: Device SKU, read from DEVICE_SKU parameter in the device memory, max 20 characters, data type of string.
- DEVICE NAME: Device name, read from DEVICE_NAME parameter in device memory, max 20 characters, data type of string.
- DEVICE SN: Device serial number, read from DEVICE_SN parameter in device memory, 20 characters, data type of string.
- DEVICE ALIAS: Device alias, read from DEVICE_ALIAS parameter in device memory, max 20 characters, data type of string.
- TOPIC TYPE: Fixed type of the topic. The topic type is CONFIG-REQUEST, a request to change the parameter.

3.1.6. Parameters in the payload of subscribed topic name

Subscribed Topic Type: Fixed type of the topic is CONFIG-REQUEST. This parameter is topicType in the published topic's payload.

Epoch Time: Topic's Epoch Time format, unit of millisecond. This parameter is epochTime in the published topic's payload.

Device Serial Number: Device serial number. This parameter is deviceSerialNumber in the published topic's payload.

Start Address: Start address of the changed configuration, in decimal. This parameter is startAddress in the published topic's payload.

Register Length: Register number of changed configuration, in decimal, max length = 400 hexadecimal value. This parameter is registerLength in the published topic's payload.

Requested Value: Requested value for the configuration change, in hexadecimal. This parameter is requestedValue in the published topic's payload.

3.1.7. Device operation flow chart

When a device subscribes to the CONFIG-REQUEST topic successfully, device implements the configuration change request and publishes CONFIG-RECEIPT topic to acknowledge the receipt of the CONFIG-REQUEST topic.

Sensor configuration can be configured in 02 methods:

Method 2: Offline configuring via **Offline cable**.

Please check Part E. MEMORY MAP in **Section 1.9** Payload Documents above.

Please refer Part C. SUBSCRIBE TOPIC in **Section 1.9** Payload Documents above.

Please download the Configuration Template File of this sensor to be used in Step 4 below.

Instructions for offline configuration of the Seismic sensors. Please follow the following steps.

The following items must be prepared for configuration.

- ## Download and launch Modbus configuration software

- After downloading the software, unzip the file named *Modbus Configuration.zip* and then copy the extracted folder to the storage drive for long-term use.

- | FILE | | EDIT | | Status Disconnected Tx Rx | | | | POLL 0
RECEIVE 0
CRC_OK 0
CRC_ERROR 0
TIME_OUT 0 | | 2023.05.18 15:24
Welcome | |
|-------------|--------------------------|-------------|-----|----------------------------------|--------|-----------|-----------------|---|-----------|-----------------------------|--|
| Port | | BaudRate | | Parity | | | | | | | |
| [v] | | 9600 [v] | | NONE [v] | | | | | | | |
| CONNECT | | | | | | | | | | | |
| | | FC | REG | #REG | FORMAT | PARAMETER | VALUE ON MEMMAP | VALUE TO WRITE | EXCEPTION | DESCRIPTION | |
| * 1 | <input type="checkbox"/> | [v] | | | [v] | | | | | | |

Note: The software only runs on Microsoft Windows OS (Windows 7 and above)

Connect the cable and configure the sensor

Step 1:

Connect the PC to the Battery Pack using the configuration cable and converter cable

- Use the configuration cable (Item code: TTL-LRW-USB-01).



- Connect the USB-A plug into the USB-A socket of the PC.




Step 2:

On the configuration software, choose the relevant *Port* (the USB port which is the cable plugged in) and set the *BaudRate*: **115200**, *Parity*: **none**

Step 3:

Click **Connect** button to connect the software to the sensor. After successful connection, the *Connected* status will show on the software.

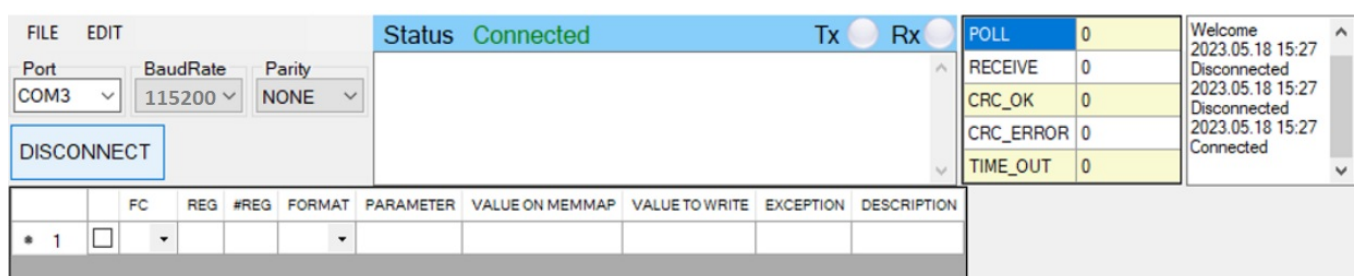

Step 4:

Import the configuration template file of the sensor (as above link) to the software: click menu **File/ Import New** and

then browse the relevant sensor template file (csv file) and click **Open** to import the template file.

⚠ Each sensor type has its own template file. Refer to the sensor's manual to download the correct file.

Step 5: Open the housing of the sensor and quickly plug the connector of the configuration cable into sensor's modbus configuration port. After that, turn on the switch 1. After the switch 1 is on, the software will read the parameter values automatically.



- Open the housing of the sensor.



- Plug the cable connector into sensor's Modbus configuration port. Note: this port is located at a different location, depends on the sensor type



- Turn on the switch 1

Step 6: Read the current value of the parameter with function 3

- At the relevant row of the parameter, check box **3** on column **FC** to read the value of the parameter. The read value is shown on **VALUE ON MEMMAP** column.

FILE EDIT

Port: COM1 BaudRate: 115200 Parity: NONE

DISCONNECT

Status: Connected Tx Rx

00.027, Tx: 00 10 11 62 00 02 04 00 03 84 B0 61
11.805, TIME_OUT
11.805, Tx: 00 03 11 80 00 01 81 0F
13.468, TIME_OUT
13.470, Tx: 00 03 11 81 00 01 D0 CF

POLL: 43
RECEIVE: 0
CRC_OK: 0
CRC_ERROR: 0
TIME_OUT: 42

Disconnected 2024.06.24 17:16
Connected 2024.06.24 17:18
Disconnected 2024.06.24 17:18
Connected

	FC	REG	#REG	FORMAT	PARAMETER	VALUE ON MEMMAP	VALUE TO WRITE	EXCEPTION	DESCRIPTION	ORDERING
1	<input type="checkbox"/>				WSLRW-SIS-1 ENGINEERING TEMPLATE					
2	<input checked="" type="checkbox"/> 3	0	2	string	FW_CODE	SEIS			Read Only;	
3	<input checked="" type="checkbox"/> 3	2	4	string	FW_VERSION	1F0615			Read Only;	
4	<input checked="" type="checkbox"/> 3	6	2	string	HW_VERSION	1H			Read Only;	
5	<input checked="" type="checkbox"/> 3	8	1	uint	HW_ERROR_IIS	0			Read Only;	
6	<input checked="" type="checkbox"/> 3	9	2	float	MG_X	7.44199991226...			Read Only;	
7	<input checked="" type="checkbox"/> 3	11	2	float	MG_Y	-76.372001647...			Read Only;	
8	<input checked="" type="checkbox"/> 3	13	2	float	MG_Z	1015.28399658...			Read Only;	

Step 7: Write the new setting to the parameter with function 16

- Double click on the column **VALUE TO WRITE** of the parameter and input the new setting of the parameter
- Uncheck the tick on the **FC** column of the parameter, click on the arrow, select **16** and then check on the **FC** column to write a new setting to the parameter. The **WRITE_OK** text will show on **EXCEPTION** column if the software successfully writes the setting.

FILE EDIT

Port

COM1

BaudRate

115200

Parity

NONE

DISCONNECT

Status **Connected**

Tx

Rx

POLL

10

RECEIVE

0

CRC_OK

0

CRC_ERROR

0

TIME_OUT

9

04.315,Tx: 00 03 00 10 00 01 84 1E

06.001,TIME_OUT

06.001,Tx: 00 03 00 11 00 01 D5 DE

07.646,TIME_OUT

07.649,Tx: 00 03 00 12 00 01 25 DE

Welcome

2024.06.24 17:13

Disconnected

2024.06.24 17:14

Disconnected

2024.06.24 17:16

Connected

	FC	REG	#REG	FORMAT	PARAMETER	VALUE ON MEMMAP	VALUE TO WRITE	EXCEPTION	DESCRIPTION	ORDERING
35	<input checked="" type="checkbox"/>	3	43...	10	string	CLIENTID	DV		Read/Writ...	
36	<input checked="" type="checkbox"/>	3	43...	16	string	USERNAME	daviteqtest ...		Read/Writ...	
37	<input checked="" type="checkbox"/>	3	44...	1	uint	PUBLISH_QOS	1		Read/Writ...	
38	<input checked="" type="checkbox"/>	3	44...	1	uint	PUBLISH_RETAIN	0		Read/Writ...	
39	<input checked="" type="checkbox"/>	3	44...	1	uint	MQTT_TIMEOUT	300		Read/Writ...	
40	<input checked="" type="checkbox"/>	3	44...	1	uint	DEBUG_ENABLE	0		Read/Writ...	
41	<input checked="" type="checkbox"/>	3	44...	2	uint	HEARTBEAT_PERIOD	21600		Read/Writ...	
42	<input checked="" type="checkbox"/>	16	44...	2	uint	CYCLE_PERIOD	600	900	Read/Writ...	
43	<input checked="" type="checkbox"/>	3	44...	1	uint	TILT_CALIB_ENABLE	0		Read/Writ...	

- Repeat step 6 to read the setting of the parameter for checking.

⚠ For some critical parameters of the sensor, the password in "password for setting" must be written before writing the new settings to these parameters.

⚠ Only read/write registers are allowed to write.

Troubleshooting of offline configuration

No.	Phenomena	Reason	Solution
1	The status on the software always shows Disconnected although the configuration cable is connected to the PC	The selected COM port is incorrect	Select the correct COM port to which the configuration cable connects to PC
		The configuration cable is defective	Check the configuration cable
2	The software reads no value after importing the right template and connecting the right cable.	The cable is defective or lost connection	Check or replace the new configuration cable
		The USB port is defective	Check USB port
		There is no power supply to the sensor via configuration cable	Check the power line of the cable
		The sensor or sensor port is defective	Check the sensor and sensor port
3	No COM port appears in the Port list	No configuration cable is plugged into the PC	Plug the cable to the PC
		The cable driver is not installed on the PC	Install the driver for the PC
4	The parameter table on the software is empty	The template file has not been imported	Click menu File and sub-menu Import New to import the template file
5	The parameter table on the software does NOT match the memory map table of the sensor.	The wrong template file was imported.	Go to the correct manual page of the product and download the right template file, then import the template file into the software.

🔄 Revision #3

★ Created Mon, Jun 16, 2025 7:47 AM by [Phi Hoang Tran](#)

✎ Updated Mon, Jun 16, 2025 10:39 AM by [Phi Hoang Tran](#)