

III. ADVANCE GUIDE

3.1 Principle of Operation

3.1.1 LED meaning

3.1.1.1 LED status

Status	Meaning
Fixed ON	iConnector has been supplied with external power
Blinking (4 seconds blink 1 time)	Without external power, iConnector is using battery.
Blinking (2 seconds blink 1 time)	Low battery warning (Used for type D battery version)

3.1.1.2 LED modbus

Status	Meaning
Fixed ON	Modbus connected
Blinking (1 seconds blink 2 time)	Connection errors (wrong configuration of baudrate, noise, ...)
OFF	No modbus connection

3.1.1.3 LED network

Status	Meaning
Blinking (1s change state)	Connecting with Globiots
Blinking (2s change state)	Initializing wifi generator, waiting for configuration via phone or modbus tool (For iConnector wifi)
OFF/Blinking (2s change state)	No connection with Globiots

3.1.2 Memory Map

Address	Size (bytes)	Memory type	Read/Write	Description
0-0x1FFF	8096	FLASH	R/W	Save active configuration, do not allow log, realtime.
0x2000-0x22FF	768	RAM	R	Save data read from modbus slaves.
0x2300-0x24FF	512	RAM	R	The intrinsic data of iConnector
0x3000-0x30FF	256	RAM	R/W	
0x5000-0x50FF	256	FLASH	R/W	
0x6000-0x6FFF	4096	RAM	R	Save data read from modbus slaves

- **Data address area:** 0x2000-0x22FF (768 bytes), and 0x6000-0x6FFF (4096 bytes).
- **Controller address area:** 0x3000-0x30FF (256 bytes, without flash storage), and 0x5000-0x50FF (256 bytes, with flash storage).

Address area 0x5000-0x50FF

- 256 bytes;
- Save in flash (when power is lost, will keep the same value);
- Allows reading, and writing from **Globiots**;
- Allow log (realtime);
- Allows Modbus write to Slaves;
- It is not allowed to store data read from Modbus Slaves.



NOTE: Flash recorded about 100,000 times will be damaged so do not use this area to contain the value is changed several times.

3.1.3 Logged data

- Up to 20 different log cycles;
- 320 log parameters maximum for all log cycles.
- Up to 120 log parameters per log cycle.

3.1.4 Modbus

- Support modbus RTU.
- Address slave 1... 247.
- It is not allowed to set address slave = 0.
- Baudrate 4800/9600/19200.
- Parity none / odd / even.
- Up to 100 modbus instructions.
- The address area for storing read data: 0x2000-0x22FF (768 bytes), and 0x6000-0x6FFF (4096 bytes).
- Controller address area: 0x3000-0x30FF (256 bytes, without flash storage), and 0x5000-0x50FF (256 bytes, with flash storage).

3.1.5 Realtime

- Read up to 200 parameters.
- If all parameters are float (4 bytes) then read up to 140 parameters.
- The fastest realtime sending frequency is 1 second.

3.1.6 Alarm

- Up to 28 alarms.
- Supported data types:

PrmType	Description	# Byte	Range
1	BYTE	1	0 to 255
2	UINT16	2	0 to 65,535
3	UINT32	4	0 to 4,294,967,295
4	FLOAT	4	-/+3.40282347 * (10 ⁺³⁸)
5	INT16	2	-32,768 to 32,767
6	INT32	4	-2,147,483,648 to 2,147,483,647

3.1.7 Event

- The event table is 1024 bytes.
- The number of events depends on the short length of the event configured.
- Supported data types:

PrmType	Description	# Byte	Range
1	BYTE	1	0 to 255
2	UINT16	2	0 to 65,535
3	UINT32	4	0 to 4,294,967,295
4	FLOAT	4	-/+3.40282347 * (10 ⁺³⁸)
5	INT16	2	-32,768 to 32,767
6	INT32	4	-2,147,483,648 to 2,147,483,647

3.1.8 Health data

- Every 15 seconds send health pack 1 time.

3.2 Configuration

3.2.1 Online configuration from Globiots

- 1 Refer section **5. Configure Device** of the Globiots manual in [the link](#) to get the instruction of configuring the iConnector in Globiots

3.2.2 Offline configuration

Step 1: Preparation

Prepare some required devices as below

- 1 01x A window PC
- 1 01x USB-RS485 Configuration Cable
- 1 01x Power adapter 12-24VDC

- 1 Download the Configuration software in [the link](#)



Computer



RS485
Configuration Cable



Power Adapter
12-24VDC

Step 2: Hardware connection


- Connect the USB-A to the PC



- Connect M12 female of the cable to the iConnector



- Power the iConnector on by connecting DC jack from Power Adapter

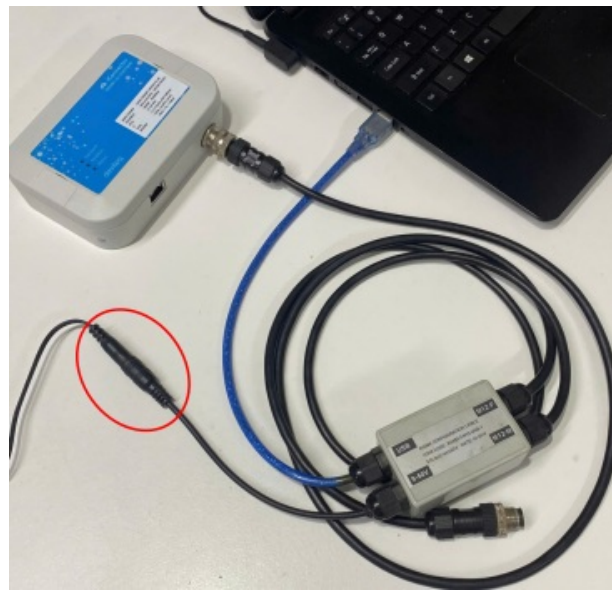


⚠ The above steps must be performed in order


Step 3: Configuration the iConnector via iConfig software

- Open the iConfig software, then choose Correct Port, BaudRate and Parity.

Port is based on the PC
BaudRate is 9600
Parity is NONE

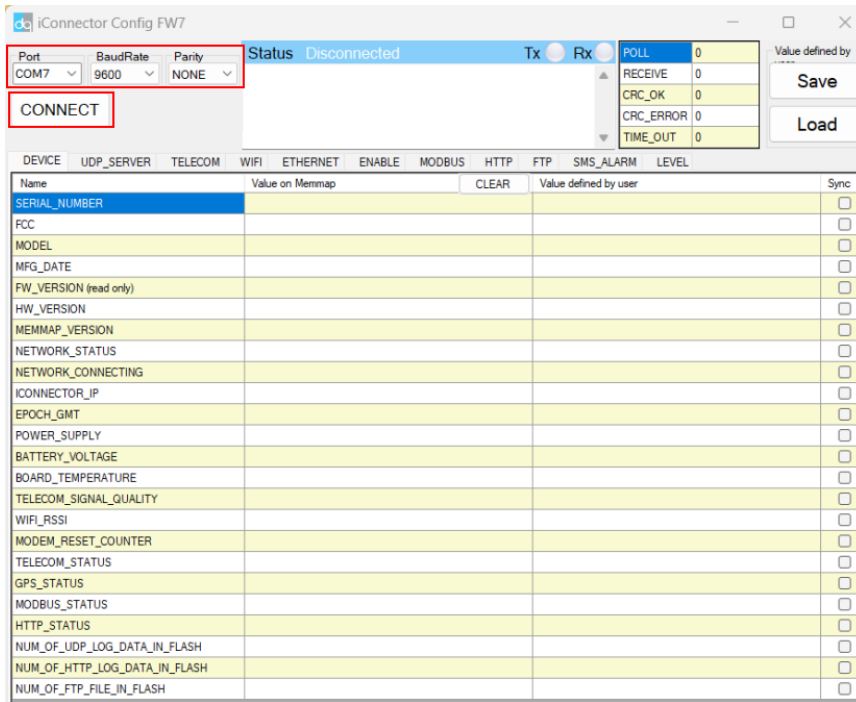

- Click **CONNECT** button on the software

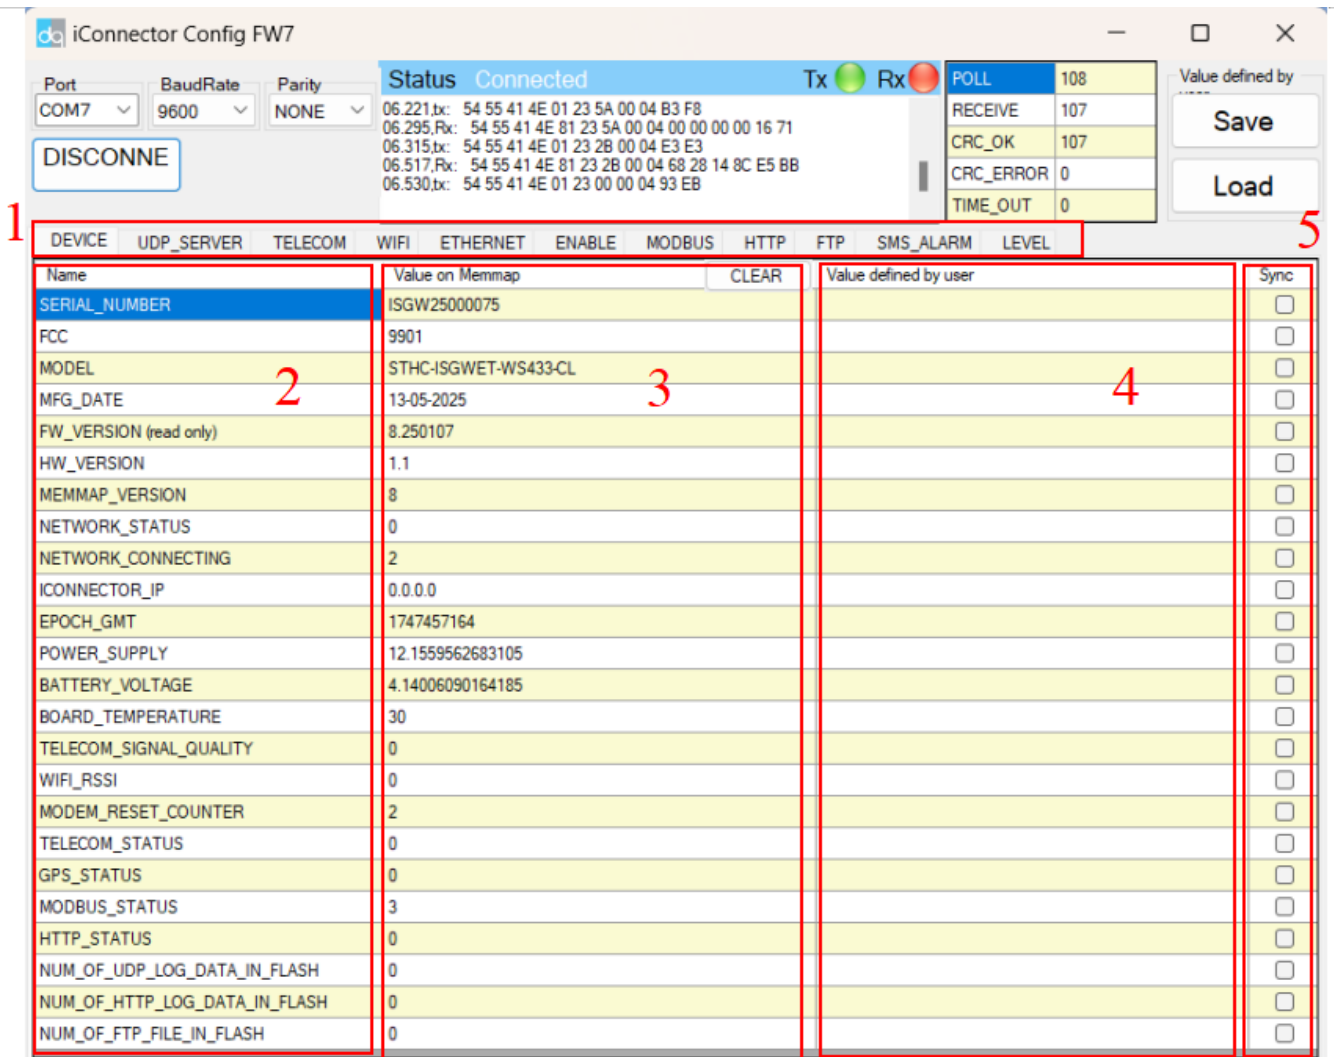

- (1) There are 11 configuration tabs on the top banner. Click a tab name to navigate to the corresponding sheet.
- (2) The first column displays the parameter names of the iConnector.
- (3) The second column shows the current values of the corresponding parameters
- (4) The third column is where users can input new configuration values.

(5) After entering the new configuration in the third column, users must tick the corresponding checkbox to apply it. The tick will disappear once the new configuration is successfully written to the iConnector. After that, the updated value will appear in the second column.

🔄 Revision #5

★ Created Wed, Jan 8, 2025 8:45 AM by [Phi Hoang Tran](#)

✎ Updated Sat, Aug 2, 2025 1:47 AM by [Phan Van Luc](#)